



# ***MultiAir FC 1000 / FC 2000 series***

## **Installation of filter kit**

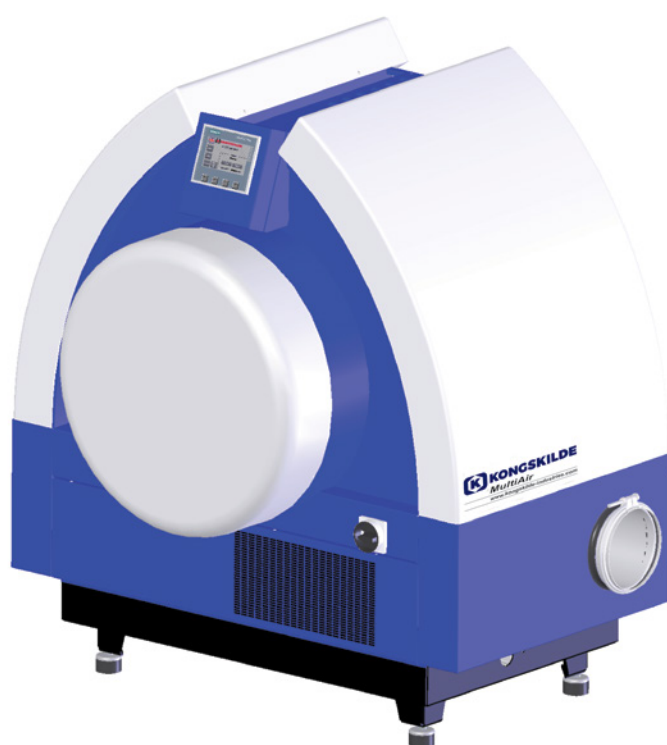

From sales no. 123022000

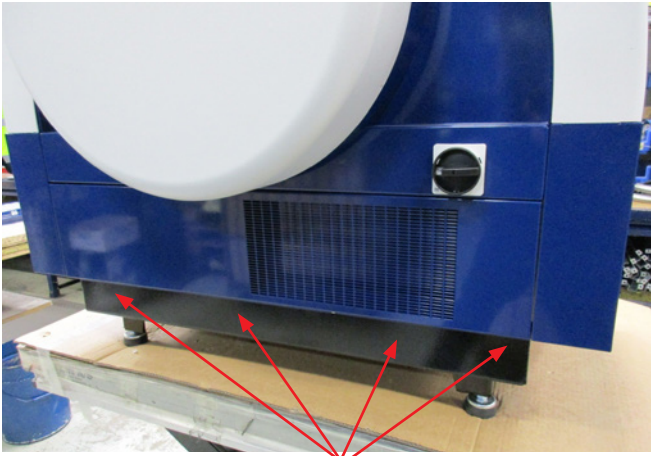

1 - remove the lower blue panel by loosening 4 screws, and put the panel aside



3 - cut off the foam strip as shown



2 - attach the enclosed foam strip in both lower corners




4 - insert the enclosed four foam blocks in both left and right side of the blowers bottom frame, and push the blocks forward / sideways, as far as possible. These blocks will close the metal sheet gaps in the bottom frame.




5 - inserted foam block



6 - push sideways

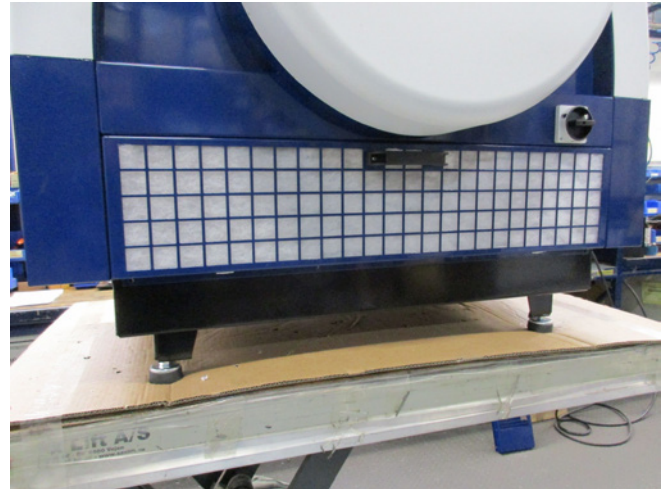

9 - insert the new filter panel, by tilting in the top first, thereafter pushing in the bottom

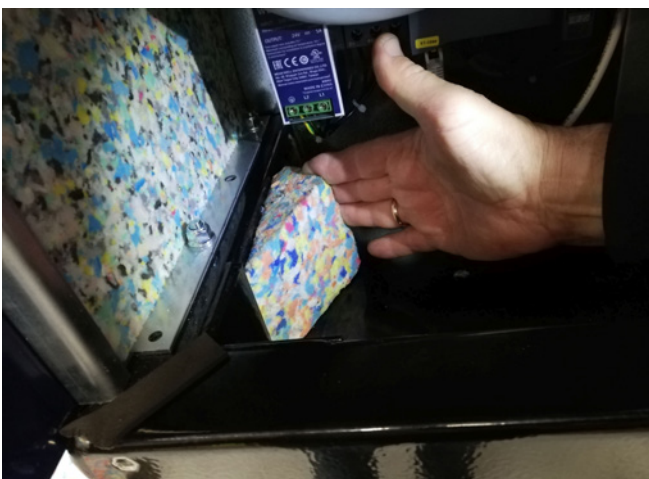

7 - push forward



10 - reattach all four screws



8 - push sideways



11 - the filter is accessible by opening the door, after which the filter can be cleaned or replaced. When the filter is inserted, ensure that the two slots are adjacent to the magnets

Kongskilde Industries A/S  
Skælskørvej 64  
DK - 4180 Sorø  
Tel. +45 72 17 60 00  
[mail@kongskilde-industries.com](mailto:mail@kongskilde-industries.com)  
[www.kongskilde-industries.com](http://www.kongskilde-industries.com)