


CFG 20/CFG 40

Chain elevator

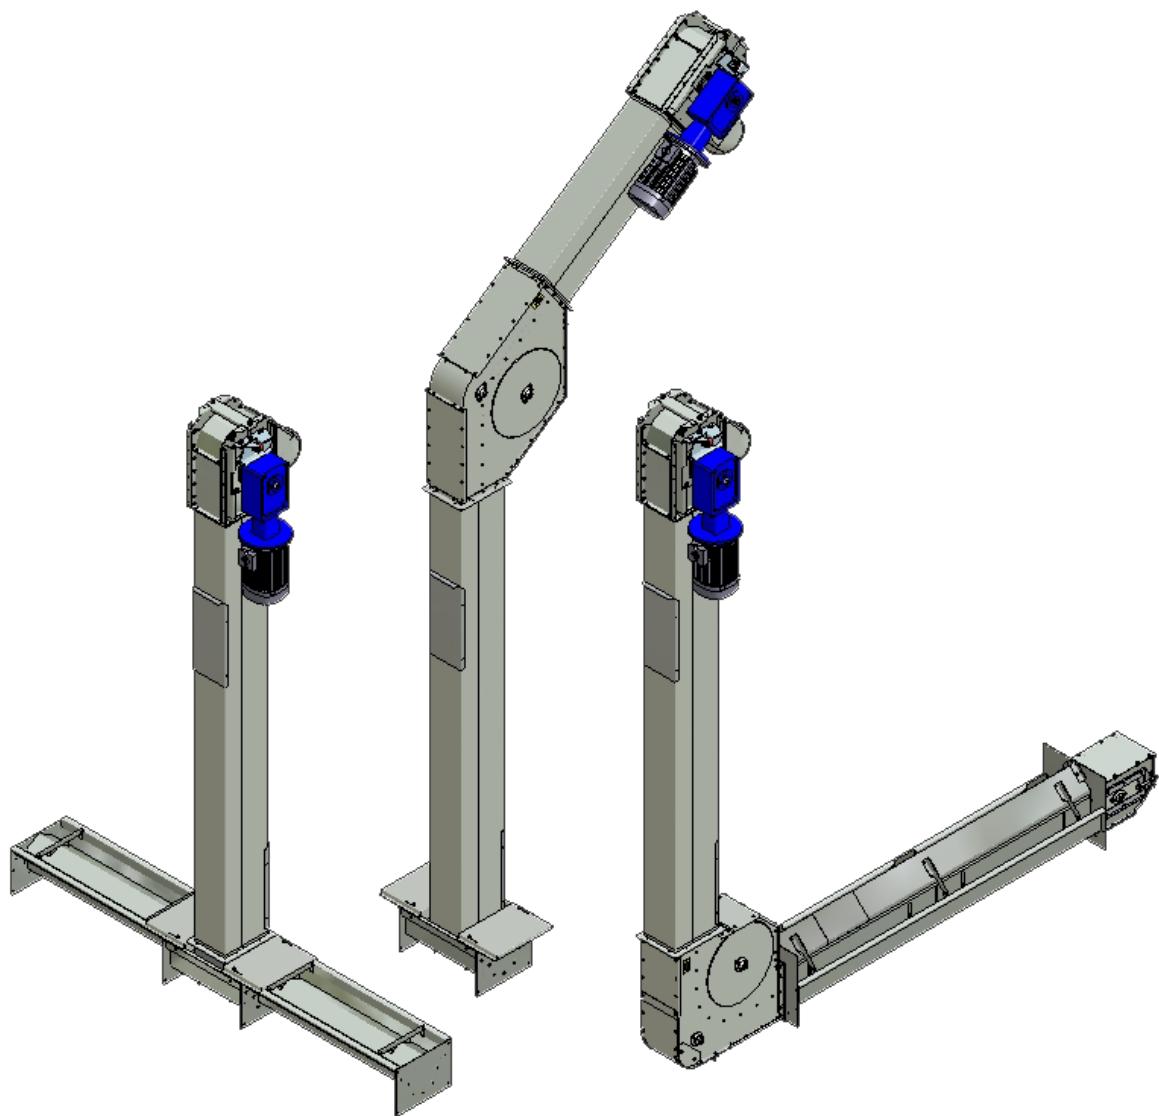

Manual & Spare parts list

Contents

Contents	2
Introduction	4
EU Declaration of conformity	5
Conditions for use	6
General information	7
Delivery	7
Storage	7
Noise level measuring	7
Type plate	8
Construction	8
Capacity	9
Technical specifications – power consumption	10
Elevator head	12
Elevator extension	12
Elevator boot	13
Scale drawing CFG 20/CFG 40 (gear motor)	14
Scale drawing CFG 20/CFG 40 90° / 55° bend and chain conveyor (Angleveyor)	14
Scale drawing CFG 20/CFG 40 (pulley drive)	16
Upon receipt	17
Warning labels	17
Foundation	18
Lifting equipment	18
Lifting instructions	19
Weight table – individual components CFG 20/CFG 40	20
Weight table chain elevator CFG 20/CFG 40	22
Weight table chain elevator CFG 20/CFG 40	23
Weight table CFG 20 (gear motor)	24
Weight table CFG 20 (pulley drive)	25
Weight table CFG 40 (gear motor)	26
Weight table CFG40 (pulley drive)	27
Assembly	28
Sealing	29
Elevator bottom section	30
Elevator top section	31

Chain elevator with auger trough	33
Chain elevator with 55° and 90° bend	34
Fitting of gear motor	35
Fitting of motor and pulley kit	36
Elevator extensions	37
Elevator chain	38
Assembly of elevator	41
Potential equalization	42
Height attachment	43
Support of increasing elevator	44
Upstart	45
Elevator stops – faultfinding	45
Maintenance	46
Gear motor	46
Motor	46
Pulley kit	46
Elevator chain	47
Rubber slats	47
Bearings	47
Lubrication of bearings	48
Elevator head	48
Elevator boot	48
Leaks	48
Noise and vibrations	48
Disposal	49
Options/accessories	50
Inspection door with inlet	50
Inlet piece for Flex elevator boot	51
Inlet d200 for Flex elevator boot, one-way	52
Extensions with pivot inlet	53
Extensions 0.5 m with 45° inlet	54
Outlet for elevator head	55
Hopper for elevator	56
Parts CFG 20/CFG 40	57
Parts list CFG 20/CFG 40	59

Introduction

Important!

Please read these instructions carefully before assembly and use.

EU Declaration of conformity

The manufacturer: JEMA AGRO A/S
Kløservejen 2, Sahl
DK-8850 Bjerringbro
Phone +45 86 68 16 55

Hereby declares that:

Product: Chain elevator
Type: CFG 20/CFG 40 (T20/T40)
Year of production: 2006

- Conforms to the Machine directive 2006/42/EF with special reference to the directive appendix 1 regarding major health- and safety regulations regarding construction and production of the machines

The following standards have been applied:

EN ISO 12100-1:2005 Basic terminology and methodology
EN ISO 12100-2:2005 Technical principles
EN 1050:1997 Principles for risk assessment

- is in accordance with EMC-directive 04/108/EF of 15th December 2004 regarding electromagnetic compatibility.

Director Jens-Peter Pedersen

Title Name

04.12.2008

Date

Signature

Conditions of use

Kongskilde Industries A/S chain elevators CFG 20/CFG 40 have been constructed for transport of grain, granular materials and seed mix.

- The chain elevators CFG 20/CFG 40 must only be used for the product(s) specified in the contract.
- The electrical connections must be done by a qualified electrician.
- The chain elevators CFG 20/CFG 40 must be potential adjusted in accordance with the current local regulations
- The chain elevators have been thoroughly controlled regarding maintenance, and a checklist has been drawn up containing regular cleaning- and maintenance intervals. If these intervals are not observed, the Kongskilde Industries A/S conditions for a trouble-free operation cease to exist and the warranty will be invalid.
- During installation, maintenance or repair the electric supply to the chain elevators must be disconnected and secured against accidental reconnection.
- The user manual must be kept / be available in close proximity to the chain elevator CFG 20/CFG 40.

General information

Delivery

The chain elevator is disassembled for shipment. Standard packing (pallet/wooden boxes, grid boxes, etc.) Regarding the actual transport there are no specific requirements apart from normal consideration.

The shipment includes the parts stated in the order confirmation.

Please read this manual carefully before installation and use.

Storage

There are no precautions regarding long-time storage.

After delivery the components must be kept in a suitable, dry storage area before installation.

Noise level

A noise level test was conducted for the chain elevator. The level has been measured in a distance of 1 m from the conveyor surface and at a height of 1.6 m from the floor level. During the test the chain elevator was running unloaded, which is the operational state of maximum noise level.

The measured noise level is not higher than **70 dB**

Type Plate

The type plated is fitted on the drive station.



Construction

The chain elevator type CFG 20/CFG 40 is made up of standard elements, which can be combined and easily integrated into all grain conveyor systems. It is characterized by a large capacity and compact dimensions. Both elevators work efficiently in all positions and compared to their capacity (output), they both have low power consumption.

The chain elevator is made of galvanized steel, which makes it perfectly suited for outdoor use. It is furthermore fitted with a high quality roller chain with bolted rubber flights.

The chain elevator can be combined for both vertical and horizontal transport by using side augers in troughs. These are driven from the elevator bottom shaft, so both elevator and side auger are driven by the same motor, alternatively the side auger can be driven separately by a directly connected gear motor.

The side auger in trough is available for both left and right elevator. The 135 diameter augers have an inclination of incl.60, incl.90, incl.125, available in lengths of 2.0m, 1.25m, 1.0m, and 0.5m.

Another combination of vertical and horizontal transport can be obtained by using a 90° bend. The inlet trough is fitted horizontally and attached with a 90° bend to the vertical part of the elevator. The inlet troughs are available in lengths of 2.0m, 1.25m, 1.0m and 0.5m.

A third combination is possible by using a 55° bend, which makes it possible to change from vertical position to 55°, e.g. above a silo roof.

The chain elevator consists of:

- Elevator head
- Elevator boot
- 2.5m extensions with inspection door
- Chain with rubber slats
- Extensions from 0.125m to 2.5m.
- Outlet
- Motor

Additional inlet piece is available.

Capacity

The table below shows the various density capacities:

Density	CFG 20 (33 m³/h)	CFG 40 (60 m³/h)
650 kg. pr. m³	21 t/h	39 t/h
700 kg. pr. m³	23 t/h	42 t/h
750 kg. pr. m³ (wheat)	25 t/h	45 t/h

Measured in cleaned, storable material at a power supply of 50 Hz

The capacity varies according to the nature of the material.

Capacity for chain elevator CFG 20/CFG 40:

CFG 20 inlet from both sides without propeller	14 t/h
CFG 20 inlet from both sides with propeller	25 t/h
CFG 20 with d135, S60 auger from one side	14 t/h
CFG 20 with d135, S90 auger from one side	19,5 t/h
CFG 20 with d135, S125 auger from one side	25 t/h
CFG 40 with inlet from both sides with propeller d135	45 t/h
CFG 40 with d135, S125 auger from both sides	45 t/h

Above capacity measured in cleaned, storable material at a density of 750 kg/m³.


Capacity per side auger fitted on chain elevator CFG 20/CFG 40:

	Auger d135 S125	Auger d135 S90	Auger d135 S60
Elevator with gear motor 280 rpm Elevator with pulley kit motor 1440 rpm rpm.: bottom shaft / auger 315 rpm	22.0	17.0	13.0
Elevator with gear motor 180 rpm Elevator with pulley kit motor 1000 rpm rpm. bottom shaft / auger 210 rpm	15.0	11.0	9.0
Auger driven by separate gear motor 250 rpm	17.5	12.5	10.0
Auger driven by separate gear motor 280 rpm	19.5	15.0	11.5
Auger driven by separate gear motor 315 rpm	22.0	17.0	13.0
Auger driven by separate gear motor 405 rpm	28.0	22.0	17.0

Above capacity measured in cleaned, storable material at a density of 750 kg/m³.

Inlet trough adjustment

CFG 20	J opening	Capacity t/h	CFG 40	J opening	Capacity t/h
Pulley drive with motor 1,500 rpm	15	5	Pulley drive with motor 1,500 rpm	15	25
	25	11		25	31
Gear motor 280 rpm	35	18	Gear motor 280 rpm	35	38
	45	25		45	45
Pulley drive with motor 1,000 rpm	20	10	Pulley drive with motor 1,000 rpm	20	30
	35	16		35	40
Gear motor 180 rpm	50	23	Gear motor 180 rpm	50	50
	65	30		65	60

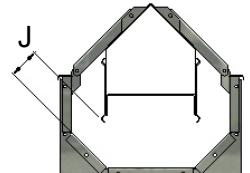

The capacity is measured at a density of 750 kg/m³.

Important! – The J dimension in the sketch is just for guidance.

Important! - Remember to adjust the inlet plates before starting.

Technical specifications – power consumption

Chain elevator CFG 20 - power consumption in kW:

Type	0-9 m	10-12 m	13-16 m	17-20 m
CFG 20	2.2 kW	3.0 kW	4.0 kW	5.5 kW




Chain elevator T40 - power consumption in kW:

Type	0-7 m	8-10 m	11-14 m	15-20 m
CFG 40	2.2 kW	3.0 kW	4.0 kW	5.5 kW




Conveyor CFG 20 - power consumption in kW:

Type	15-17 m	18-20 m
CFG 20	4.0 kW	5.5 kW

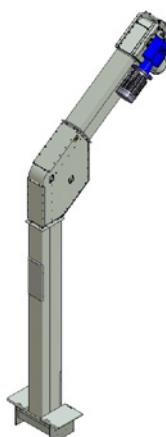


Conveyor CFG 40 - power consumption in kW:

Type	15-20 m
CFG 40	5.5 kW

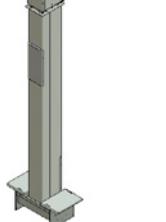

Heighth, metres	Length		
	2.35 m	3.35 m	4.35 m
	kW CFG 20/CFG 40	kW CFG 20/CFG 40	kW CFG 20/CFG 40
3.65	2.2/3.0	2.2/3.0	2.2/3.0
4.61	2.2/3.0	2.2/3.0	2.2/3.0
5.61	2.2/3.0	2.2/3.0	3.0/3.0
6.61	2.2/3.0	3.0/3.0	3.0/4.0
7.57	3.0/3.0	3.0/4.0	3.0/4.0
8.57	3.0/4.0	3.0/4.0	4.0/4.0
9.66	3.0/4.0	4.0/4.0	4.0/4.0
10.66	4.0/4.0	4.0/4.0	4.0/5.5
11.66	4.0/4.0	4.0/5.5	4.0/5.5
12.62	4.0/5.5	4.0/5.5	5.5/5.5
13.62	4.0/5.5	5.5/5.5	5.5/5.5
14.58	5.5/5.5	5.5/5.5	5.5/5.5
15.58	5.5/5.5	5.5/5.5	5.5/5.5
16.58	5.5/5.5	5.5/5.5	
17.66	5.5/5.5		

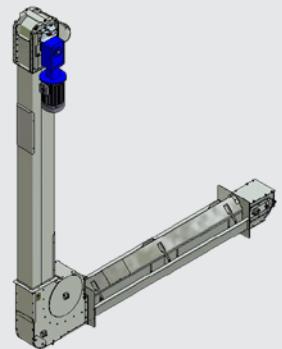

Heighth, metres	Length			
	5.35 m	6.35 m	7.35 m	8.35 m.
	kW CFG 20/CFG 40	kW CFG 20/CFG 40	kW CFG 20/CFG 40	kW CFG 20/CFG 40
3.65	2.2/3.0	3.0/3.0	3.0/4.0	3.0/4.0
4.61	3.0/3.0	3.0/4.0	3.0/4.0	4.0/4.0
5.61	3.0/4.0	3.0/4.0	4.0/4.0	4.0/5.5
6.61	3.0/4.0	4.0/4.0	4.0/4.0	4.0/5.5
7.57	4.0/4.0	4.0/4.0	4.0/5.5	4.0/5.5
8.57	4.0/4.0	4.0/5.5	4.0/5.5	5.5/5.5
9.66	4.0/5.5	4.0/5.5	5.5/5.5	5.5/5.5
10.66	4.0/5.5	5.5/5.5	5.5/5.5	5.5/5.5
11.66	5.5/5.5	5.5/5.5	5.5/5.5	5.5/5.5
12.62	5.5/5.5	5.5/5.5	5.5/5.5	
13.62	5.5/5.5	5.5/5.5		
14.58	5.5/5.5			

Additional power consumption per meter auger in trough d135 = 0.35 kW.


At a total consumption above 5.5 kW, separate drive for the side augers will be used.

Power consumption separate drive for auger in trough d135:

Up to 6.0 m auger = 2.2 kW


Above 6.0 m auger = 3.0 kW

Side augers separate drive

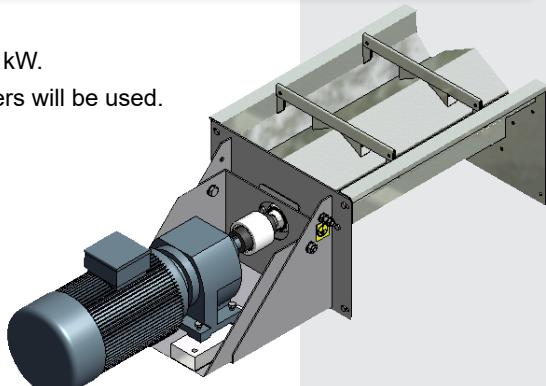

Elevator head

The elevator head is delivered as a complete unit. The motor is supplied separately.

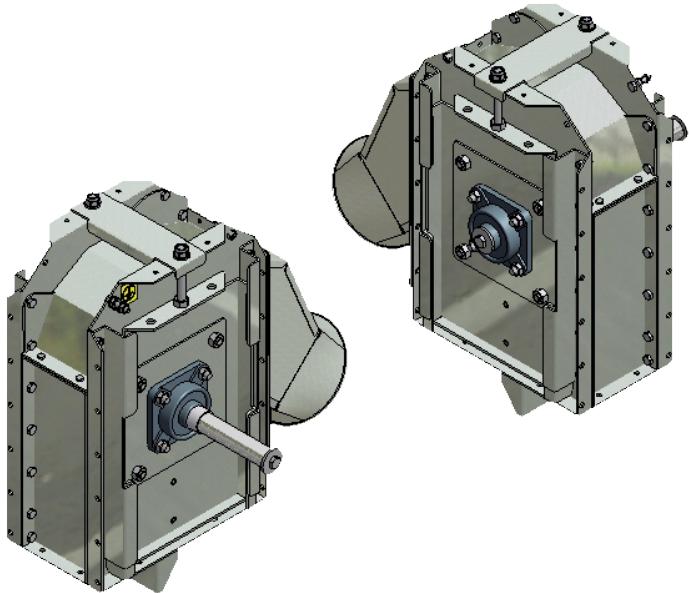


Elevator extensions

The extensions are available in various lengths:
2.5 m, 2.0 m, 1.0 m, 0.5 m, 0.25 m, 0.125 m.

Extensions with inspection doors are available in lengths
of 2.5 m.


Inlet troughs are available in lengths of:
2.0 m, 1.25 m, 1.0 m, and 0.5 m.

The elements can be combined to obtain any
lengths - for the vertical elevator with steps
of 0.125 m. and with intervals of 0.25 m for the
horizontal elevator - up to a total length of 20.0 m.

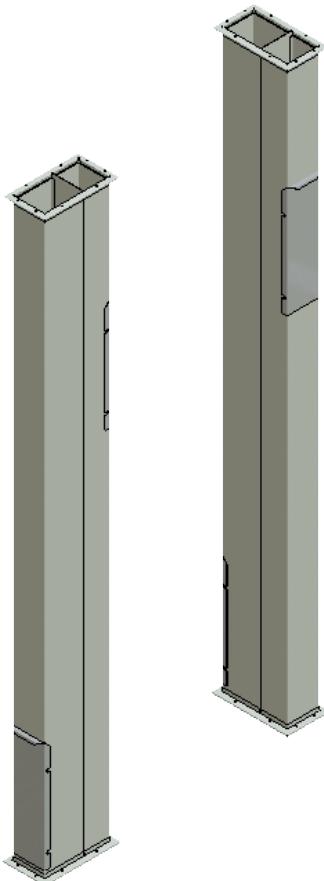


Elevator boot

The boot section is fitted in trough from vertical position to 45°. Augers in trough can be fitted to the boot section in one or both sides.

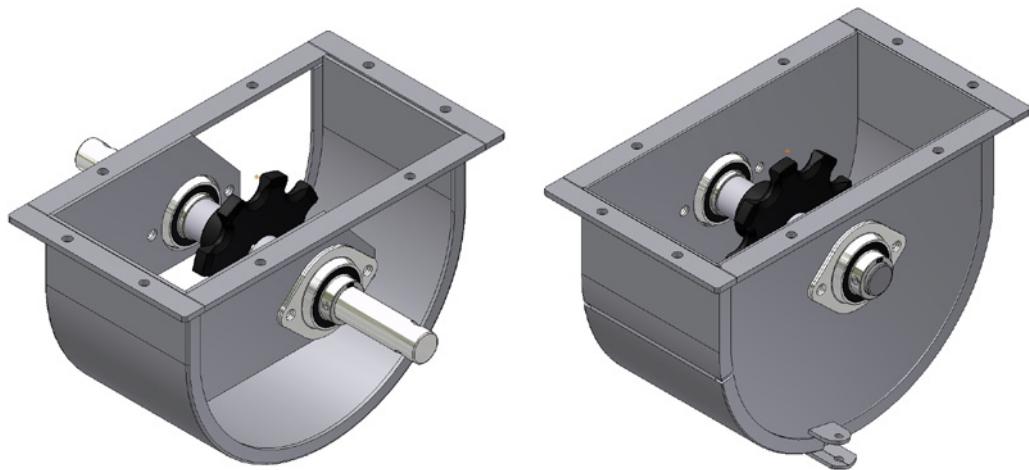

Elevator boot with inlet

Closed boot

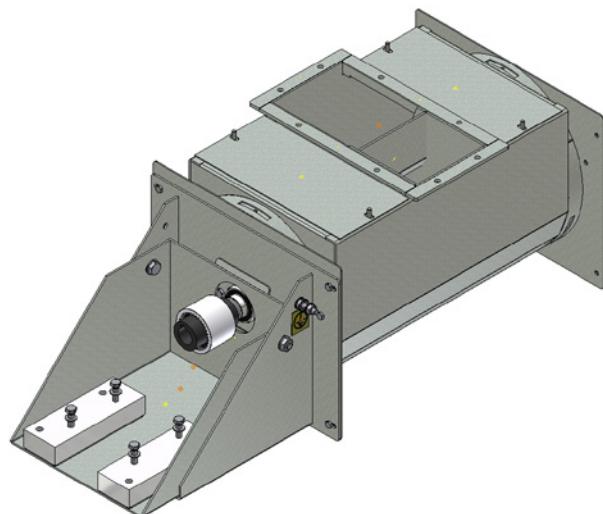


Flex-boot section with console and clutch

Scale drawing CFG 20/CFG 40 (gear motor)

	A	B	C	D	E	F	G	H	I	J	K
CFG 20	378	215	175	335	135	530	430	500	OK160	278	215
CFG 40	457	277	240	400	200	550	480	500	SK200	278	215

	L	M	N	O	P	Q	R	S	T	U	V
CFG 20	320	400	760	300	520	365	265	300	265	365	500
CFG 40	320	400	760	300	520	365	265	300	265	365	500

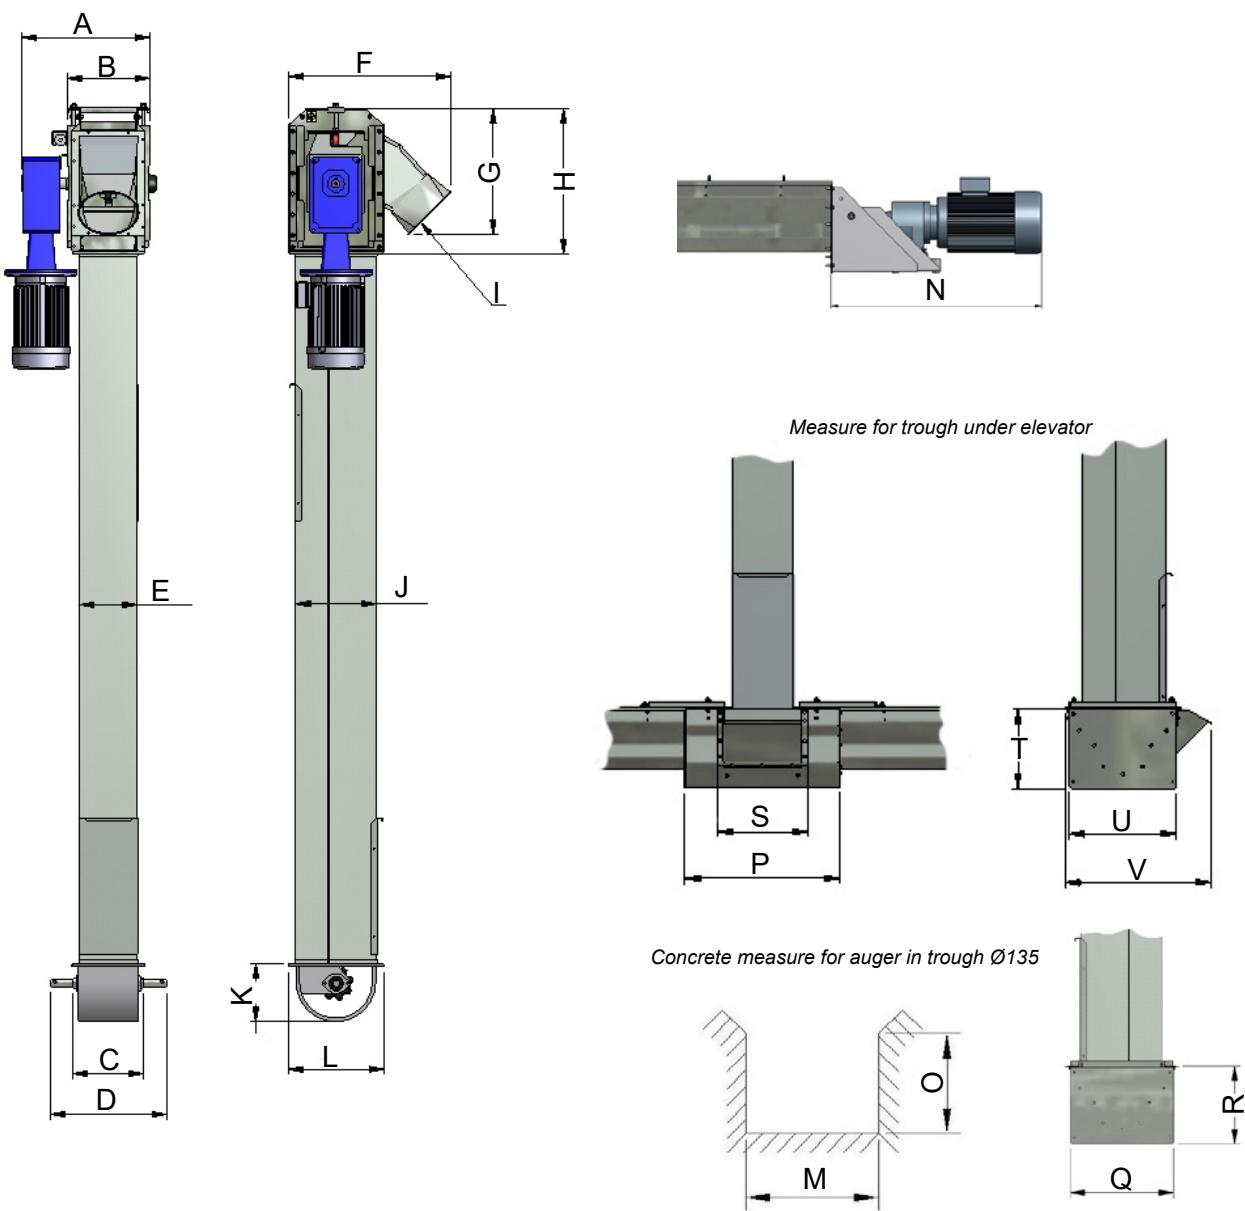


Fill up the auger trough with dry sand, and then trim around the edges.

Scale drawing CFG 20/CFG 40 90°/55° bend and chain conveyor (Angleveyor)


(gear motor)

	A	B	C	D	E	F	G	H	I
CFG 20	375	230	350	720	430	280	720	730	1045
CFG 40	390	230	410	720	430	280	720	730	1045

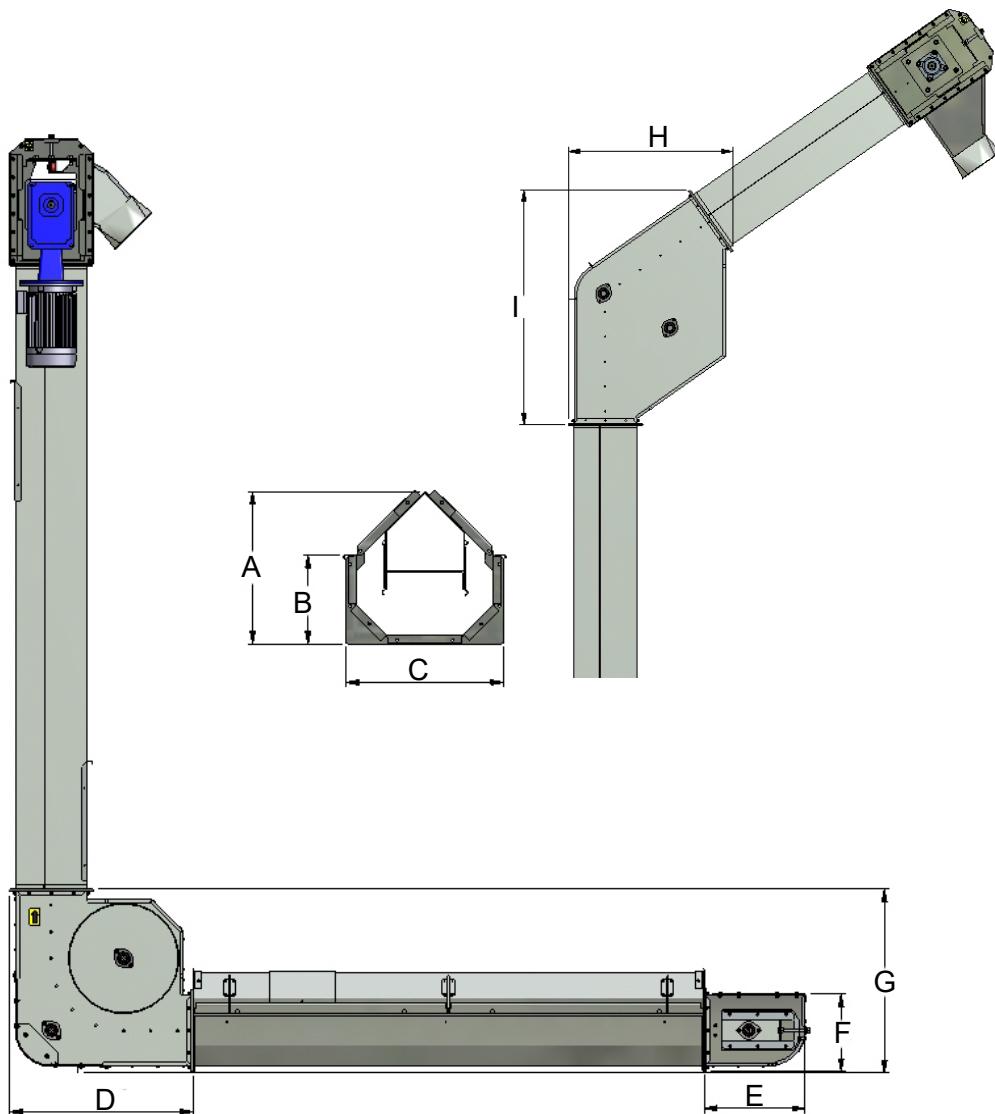

Scale drawing CFG 20/CFG 40 (pulley drive)

	A	B	C	D	E
CFG 20	505	890	440	500	OK160
CFG 40	525	940	450	500	$\varnothing 200$

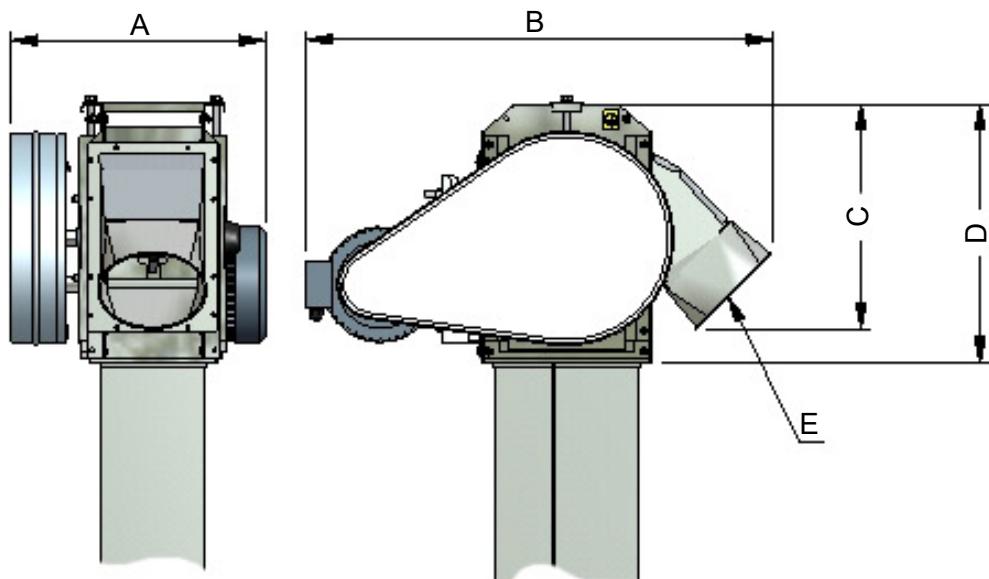

Upon receipt

Please check that all parts and components are included in the shipment and check for possible transport damages.

NB: Make sure that the relevant supplier documentation is attached to the gear and motor. In case of missing documentation, please contact Kongskilde Industries A/S – remember to state the order no.

Remember all necessary safety equipment before installation.

Please read this manual carefully before assembly or installation work begins.

Warning labels

The chain elevator is fitted with warning labels.

Warning!

The covers and shields must never be opened or removed, when the machine is working.

Warning!

Always keep hands away from rotating augers/propellers.



Foundation

The chain elevator should be placed on a sufficiently hard, level surface that is able to carry the load in question.


Lifting equipment

Make sure to have the required SWL-approved lifting equipment/crane, required for the actual job.

The lifting equipment must be approved to carry the load in question.

The load capacity for the individual components can be found in "Parts list CFG 20/CFG 40" in this manual.


The total weight of the machine is stated in the section "Weight table chain elevator CFG 20/CFG 40".

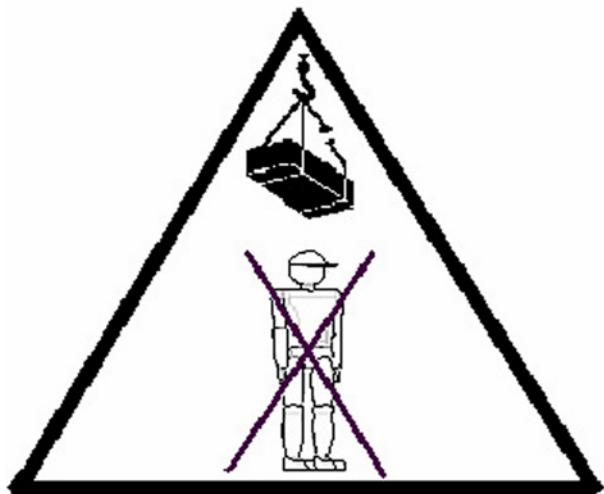


NB: Always make sure that nobody is standing under a suspended load.

Lifting instructions



The drawing below shows how to lift the chain elevator using the attached brackets.

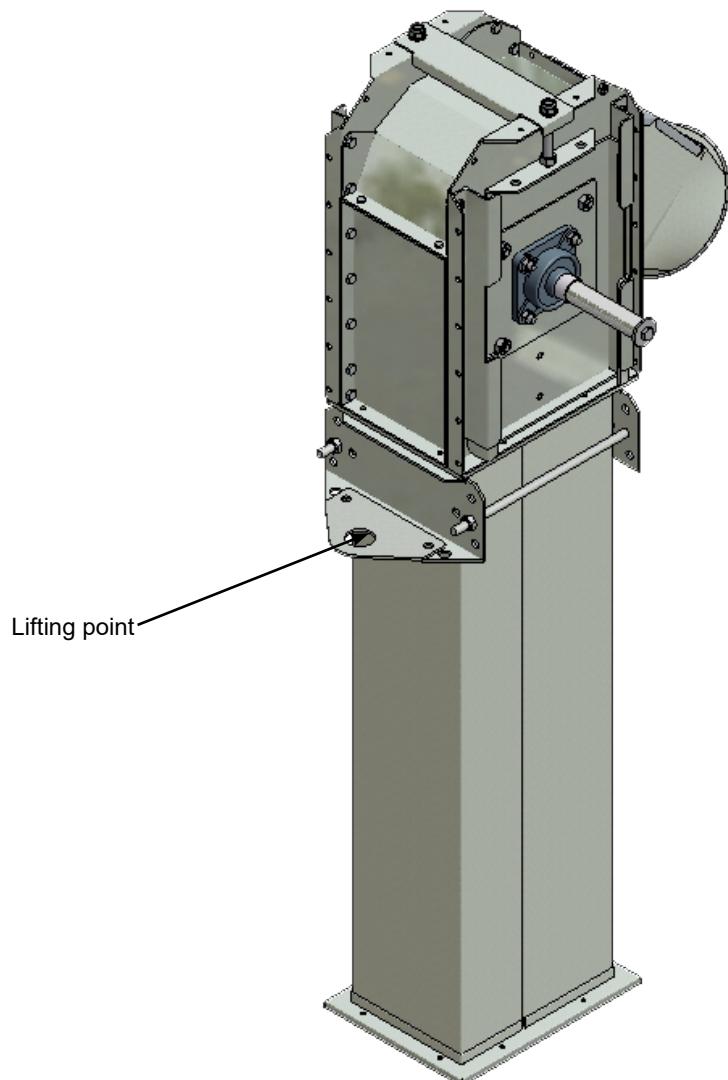

Weight table – individual components CFG20/CFG 40

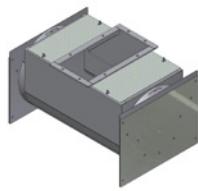	Description	CFG 20 Part no.	Weight kg	CFG 40 Part no.	Weight kg
	Drive station for pulley drive	92051577	36	92052116	39
	Drive station for pinion gear motor, RHS	92051583	36	92052483	39
	Drive station for pinion gear motor, LHS	92051585	36	92052485	39
	Tension section	92044095	12.61	92045095	13.77
	Elevator boot d135, without chain	92051142	7	92052142	8
	Elevator boot d135, with ball bearings in sprocket, without chain	92051143	8	92052143	9
	Elevator boot, closed without chain	92051231	6.6	92052231	7,3
	Flex elevator boot, without chain	92051312	20	92052312	20,7
	Flex elevator boot, with ball bearings in sprocket, without chain	92051316	22	92052316	22,7
	Extension 2.5 m with inspection door	92051012	35	92052012	37
	Extension 2.5 m	92051021	35	92052021	37
	Extension, 2.0 m	92051022	28	92052022	32
	Extension, 1.0 m	92051024	14	92052024	16
	Extension, 0.5 m	92051025	7	92052025	8
	Extension, 0.25 m	92051026	3	92052026	5
	Extension 1.25 m	92051027	2	92052027	3

Weight table – individual components CFG 20/CFG 40

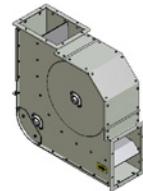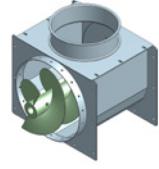	Description	CFG 20 Part no.	Weight kg	CFG 40 Part no.	Weight kg
	Extension 0.5 m with side inlet d200 without chain	92044130	10.5	92045130	12
	90° bend without chain with sprocket	92051060	37.00	92052060	42.50
	55° bend without chain with sprocket	92051030	35.2	92052030	40.0
	Trough under elevator 45/90°	92051056	13	92051056	13
	Hopper kit with cover for 0.5 m inlet trough	92044024	12	92045024	13
	Chain complete, running metres	92020028	2	92040028	4
	Hopper for elevator	92000082	35	92000082	35
	Inlet d200 40 t/h for flex boot, one-way RHS	-		92052320	15
	Inlet d200 40 t/h for flex boot, one-way LHS	-		92052321	15

Weight table – chain elevator CFG 20/CFG 40

Complete with gear motor, trough under elevator and propeller with pin – LHS & RHS

Height, metres	CFG 20	CFG 40
	Pinion gear motor 280 rpm	Pinion gear motor 280 rpm
	Kg.	Kg.
3.0	204.000	221.200
4.0	222.000	245.200
5.0	240.000	269.200
6.0	258.000	299.200
7.0	276.000	323.200
8.0	294.000	341.200
9.0	312.000	365.200
10.0	336.000	394.200
11.0	354.000	418.200
12.0	372.000	442.200
13.0	390.000	460.200
14.0	413.000	495.200
15.0	431.000	519.200
16.0	449.000	543.200
17.0	478.000	567.200
18.0	496.000	585.200
19.0	514.000	603.200
20.0	532.000	621.200



Complete with pulley drive, trough under elevator and propeller with pin – LHS & RHS


Height, metres	CFG 20	CFG 40
	Motor 1500 rpm pulley kit 71/355	Motor 1500 rpm pulley kit 71/355
	Kg.	Kg.
3.0	207.000	224.200
4.0	225.000	248.200
5.0	243.000	272.200
6.0	261.000	302.200
7.0	279.000	326.200
8.0	297.000	344.200
9.0	315.000	368.200
10.0	339.000	397.200
11.0	357.000	421.200
12.0	375.000	445.200
13.0	393.000	463.200
14.0	416.000	498.200
15.0	434.000	522.200
16.0	452.000	546.200
17.0	481.000	570.200
18.0	499.000	588.200
19.0	517.000	606.200
20.0	535.000	624.200



Weight table – chain elevator CFG 20/CFG 40


Complete with gear motor, 55° bend, trough under elevator, propeller with pin – LHS & RHS

Height in metres	CFG 20		CFG 40	
	Pinion gear motor 280 rpm		Pinion gear motor 280 rpm	
	Kg.	Kg.	Kg.	Kg.
15.0	385.000		476.000	
16.0	399.000		496.000	
17.0	413.000		516.000	
18.0	438.000		536.000	
19.0	452.000		556.000	
20.0	466.000		576.000	

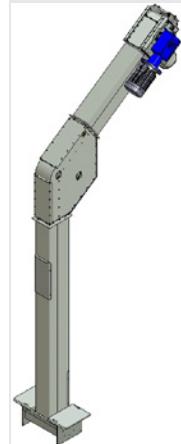

Complete with pulley drive, 55° bend, trough under elevator, propeller with pin – LHS & RHS


Height in metres	CFG 20		CFG 40	
	Motor 1500 rpm pulley kit 71/355		Motor 1500 rpm pulley kit 71/355	
	Kg.	Kg.	Kg.	Kg.
15.0	385.000		476.000	
16.0	399.000		496.000	
17.0	413.000		516.000	
18.0	438.000		536.000	
19.0	452.000		556.000	
20.0	466.000		576.000	

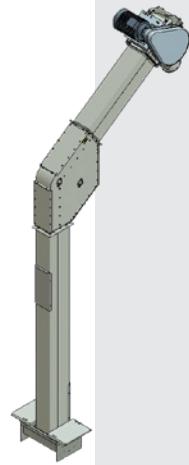

Weight table –CFG 20 (gear motor)

Complete with gear motor, 90° bend and inlet trough.

Height in metres	Length		
	2.0 m.	3.0 m.	4.0 m.
	Motor 280 rpm	Motor 280 rpm	Motor 280 rpm
	Kg	Kg	Kg
4.0	256.000	292.000	312.500
5.0	274.000	310.000	332.500
6.0	292.000	328.000	354.500
7.0	310.000	352.000	372.500
8.0	334.000	370.000	390.500
9.0	352.000	388.000	408.500
10.0	370.000	406.000	431.500
11.0	388.000	429.000	449.500
12.0	411.000	447.000	467.500
13.0	429.000	465.000	485.500
14.0	447.000	483.000	512.500
15.0	465.000	512.000	530.500
16.0	494.000	530.000	548.500
17.0	512.000	548.000	
18.0	530.000		

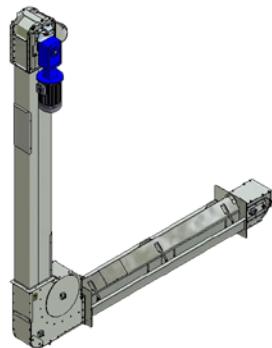


Height in metres	Length			
	5.0 m.	6.0 m.	7.0 m.	8.0 m.
	Motor 280 rpm	Motor 280 rpm	Motor 280 rpm	Motor 280 rpm
	Kg	Kg	Kg	Kg
4.0	349.000	375.000	411.000	432.000
5.0	367.000	393.000	429.000	450.000
6.0	389.000	411.000	447.000	473.000
7.0	409.000	429.000	470.000	491.000
8.0	427.000	452.000	488.000	509.000
9.0	450.000	470.000	506.000	527.000
10.0	468.000	488.000	524.000	556.000
11.0	486.000	506.000	553.000	574.000
12.0	504.000	535.000	571.000	592.000
13.0	533.000	553.000	589.000	
14.0	551.000	571.000		
15.0	569.000			

Weight table –CFG 20 (pulley drive)

Complete with pulley drive, 90° bend and inlet trough.

Height in metres	Length		
	2.0 m	3.0 m	4.0 m
	Motor 1500 rpm pulley kit	Motor 1500 rpm pulley kit	Motor 1500 rpm pulley kit
	Kg	Kg	Kg
4.0	259.000	295.000	315.500
5.0	277.000	313.000	335.500
6.0	295.000	331.000	357.500
7.0	313.000	355.000	375.500
8.0	337.000	373.000	393.500
9.0	355.000	391.000	411.500
10.0	373.000	409.000	434.500
11.0	391.000	432.000	452.500
12.0	414.000	450.000	470.500
13.0	432.000	468.000	488.500
14.0	450.000	486.000	515.500
15.0	468.000	515.000	533.500
16.0	497.000	533.000	551.500
17.0	515.000	551.000	
18.0	533.000		

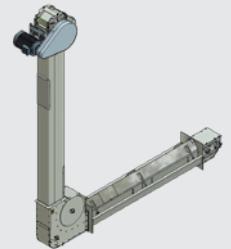


Height in metres	Length			
	5.0 m	6.0 m	7.0 m	8.0 m
	Motor 1500 rpm pulley kit			
	Kg	Kg	Kg	Kg
4.0	352.000	378.000	414.000	435.000
5.0	370.000	396.000	432.000	453.000
6.0	392.000	414.000	450.000	476.000
7.0	492.000	432.000	473.000	494.000
8.0	430.000	455.000	491.000	512.000
9.0	453.000	473.000	509.000	530.000
10.0	471.000	491.000	527.000	559.000
11.0	489.000	509.000	556.000	577.000
12.0	507.000	538.000	574.000	595.000
13.0	536.000	555.000	592.000	
14.0	554.000	574.000		
15.0	572.000			

Weight table –CFG 40 (gear motor)

Complete with gear motor, 90° bend and inlet trough.

Height in metres	Length		
	2.0 m	3.0 m	4.0 m
	Motor 280 rpm	Motor 280 rpm	Motor 280 rpm
	Kg	Kg	Kg
4.0	298.000	334.000	354.500
5.0	316.000	352.000	374.500
6.0	334.000	370.000	396.500
7.0	352.000	394.000	414.500
8.0	376.000	412.000	432.500
9.0	394.000	430.000	450.500
10.0	412.000	448.000	473.500
11.0	430.000	471.000	491.500
12.0	453.000	489.000	509.500
13.0	471.000	507.000	527.500
14.0	489.000	525.000	556.500
15.0	507.000	554.000	574.500
16.0	536.000	572.000	592.500
17.0	554.000	590.000	
18.0	572.000		

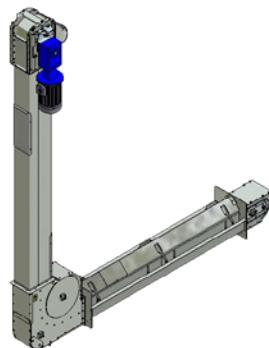


Height in metres	Length			
	5.0 m	6.0 m	7.0 m	8.0 m
	Motor 280 rpm	Motor 280 rpm	Motor 280 rpm	Motor 280 rpm
	Kg	Kg	Kg	Kg
4.0	391.000	417.000	453.000	474.000
5.0	415.000	435.000	471.000	492.000
6.0	433.000	453.000	489.000	515.000
7.0	451.000	471.000	512.000	533.000
8.0	469.000	494.000	530.000	551.000
9.0	492.000	512.000	548.000	569.000
10.0	510.000	530.000	566.000	598.000
11.0	528.000	548.000	595.000	616.000
12.0	546.000	577.000	613.000	634.000
13.0	575.000	595.000	631.000	
14.0	593.000	613.000		
15.0	611.000			

Weight table –CFG 40 (pulley drive)

Complete with pulley drive, 90° bend and inlet trough.

Height in metres	Length		
	2.0 m	3.0 m	4.0 m
	Motor 1500 rpm pulley kit	Motor 1500 rpm pulley kit	Motor 1500 rpm pulley kit
	Kg	Kg	Kg
4.0	301.000	337.000	357.500
5.0	319.000	355.000	377.500
6.0	337.000	373.000	399.500
7.0	355.000	397.000	417.500
8.0	379.000	415.000	435.500
9.0	397.000	433.000	453.500
10.0	415.000	451.000	476.500
11.0	433.000	474.000	494.500
12.0	456.000	492.000	512.500
13.0	474.000	510.000	530.500
14.0	492.000	528.000	559.500
15.0	510.000	557.000	577.500
16.0	539.000	575.000	595.500
17.0	557.000	593.000	
18.0	575.000		

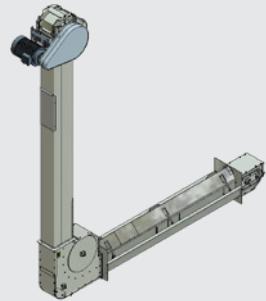

Height in metres	Length			
	5.0 m	6.0 m	7.0 m	8.0 m
	Motor 1500 rpm pulley kit			
	Kg	Kg	Kg	Kg
4.0	394.000	420.000	456.000	477.000
5.0	418.000	438.000	474.000	495.000
6.0	436.000	456.000	492.000	518.000
7.0	454.000	474.000	515.000	536.000
8.0	472.000	497.000	533.000	554.000
9.0	495.000	515.000	551.000	572.000
10.0	513.000	533.000	569.000	601.000
11.0	531.000	551.000	598.000	619.000
12.0	549.000	580.000	616.000	637.000
13.0	578.000	598.000	634.000	
14.0	596.000	616.000		
15.0	614.000			

Assembly

Please check the foundation and the transport direction (location of inlet and outlet), before starting the assembly.

It is important to read these instructions carefully before starting the assembly.

Check that there is sufficient space available.

Attention!

Before starting the assembly work, check that the required safety equipment is at disposal, e.g. work gloves, safety footwear, helmet, safety glasses and a lifeline, if necessary. This equipment is not included as standard.

Assemble the elevator in two parts, top and bottom section:

- The bottom part consists of the elevator boot, 2.5 m extension with inspection door (the assembly of the chain is made through this door) and elevator extensions corresponding to half the height of the elevator.
- The top section consists of the elevator head and the remaining number of extensions, and must be assembled with the chain - remember that the overlapping plate must be facing downward.
- The elevator extensions with inspection doors must be fitted at the elevator base plate, and the end with inspection door in the return channel must be facing downward.


Assemble the top- and bottom section, once the individual sections have been assembled.

Sealing

All the joints must be sealed with a sealing compound in order to avoid dust and moisture nuisance.



The sealer must be applied at the flanges inside the holes.

After sealing the joints must be bolted together.

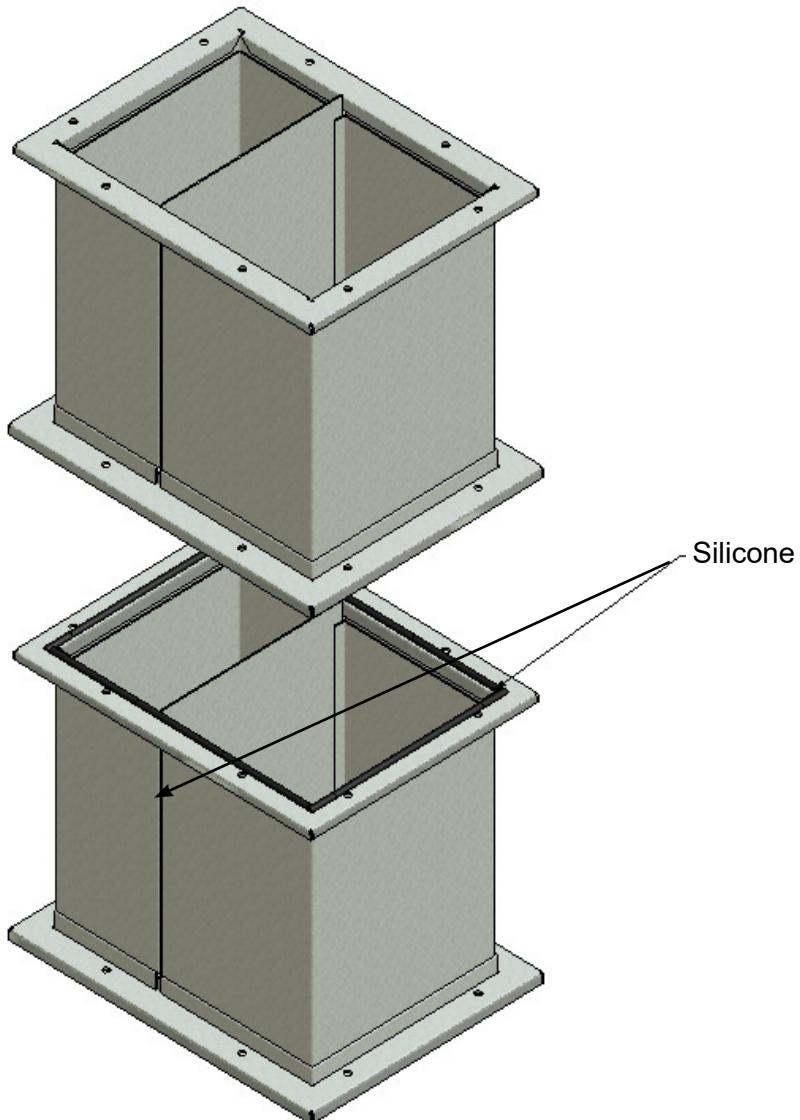


Elevator boot section

Fit and properly attach the boot part to the foundation. Fit the extensions – remember that the overlapping plate must be facing downward.

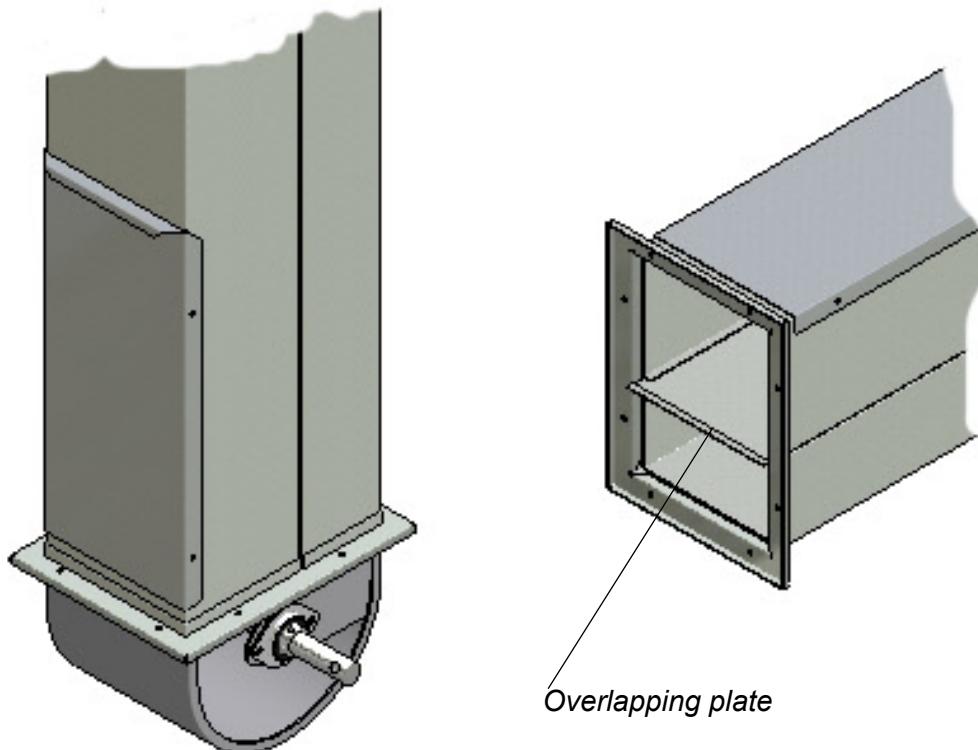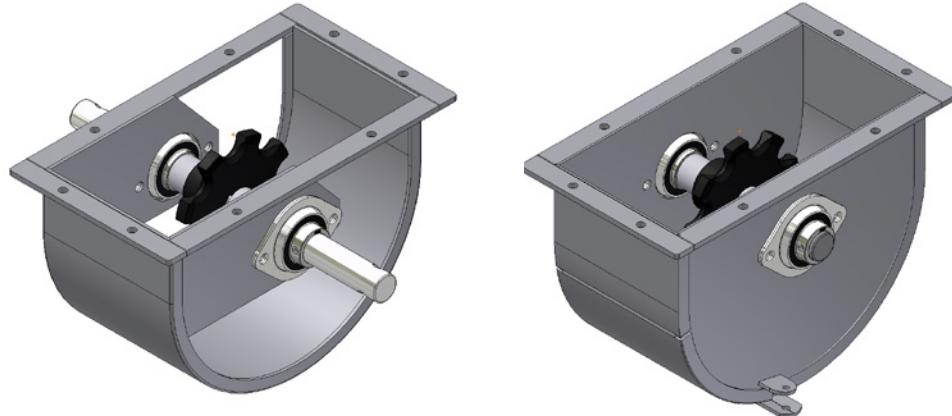


Elevator top section

Assemble the elevator top section on the floor. Fit extensions to the elevator head in dimensions corresponding to half of the total elevator height. When the extensions are fitted, fit the chain with rubber slats (see instructions in the section "Elevator chain").

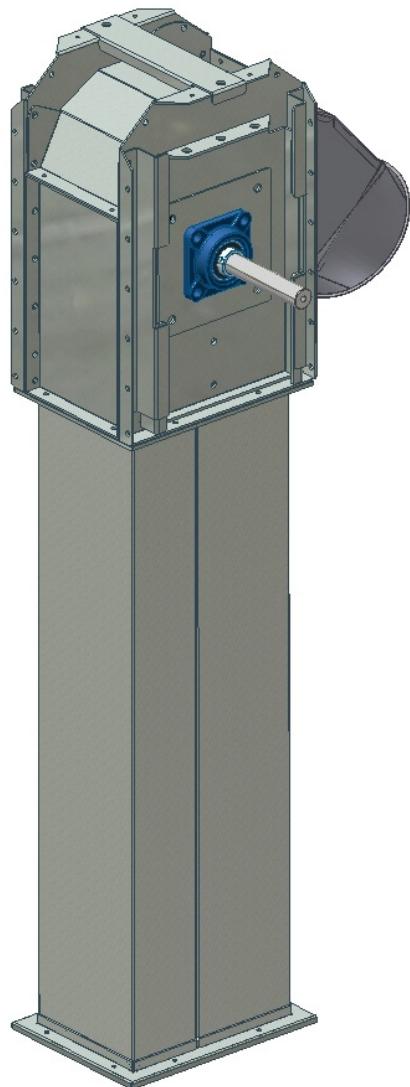

Warning!


It is important to fit a tube of min. 850mm or another type of blocking device to avoid the risk of somebody sticking a hand or arm into the machine.

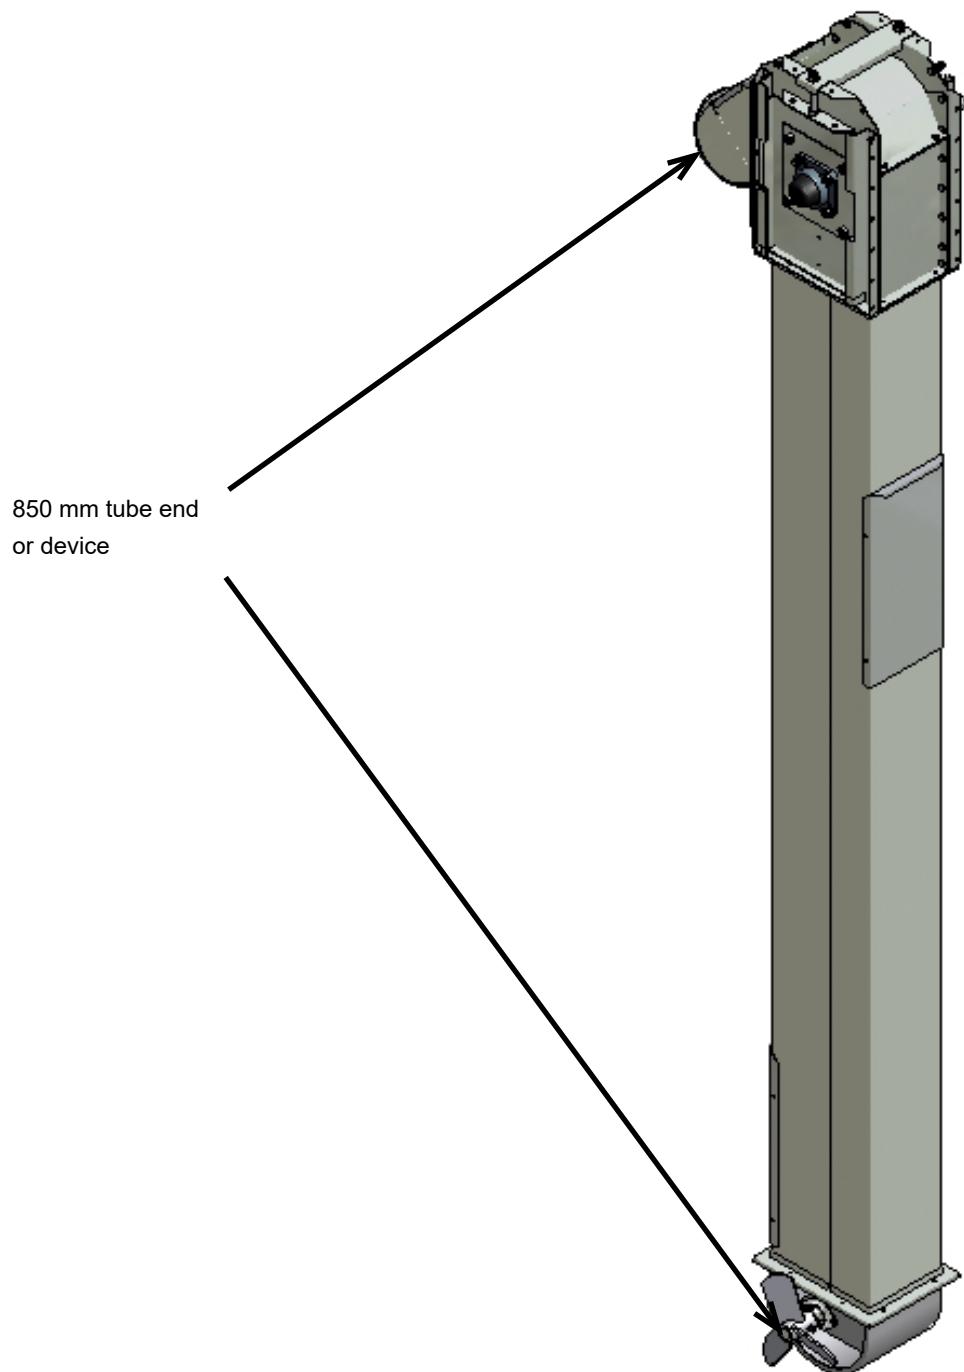


Chain elevator with auger trough

Fit propellers, propeller with pin or with pin and free wheel, to the bottom shaft of the elevator, and fit side augers, if specified, to these.


Make sure that propellers and augers are fitted on the right side, so the material is directed towards the elevator. Attach the cover above the augers and the trough cover plates.

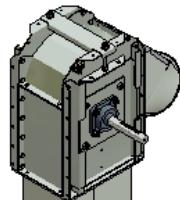

Position	Description
1	Trough under elevator 45°- 90°
2	Auger in trough RHS: Ø135-S60, d135-S90, Ø135-S125 Length: 2.0 m – 1.25 m – 1.0 m – 0.5 m
3	Auger in trough LHS: Ø135-S60, Ø135-S90, Ø135-S125 Length: 2.0 m – 1.25 m – 1.0 m – 0.5 m

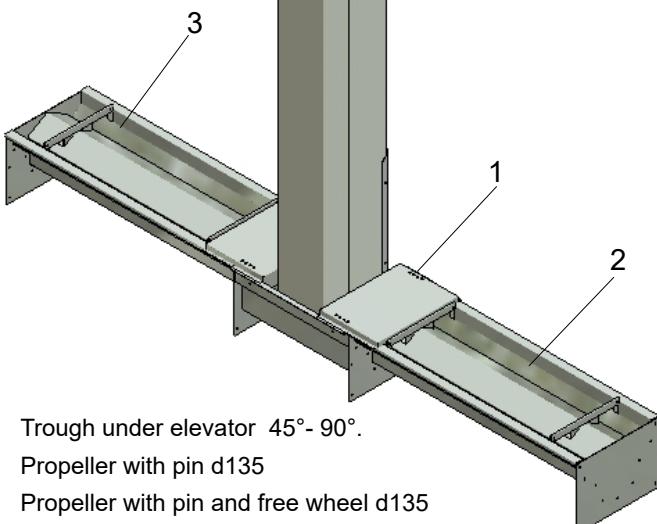


1. Trough under elevator 45°- 90°.
2. Propeller with pin d135
3. Propeller with pin and free wheel d135
4. Propeller without pin

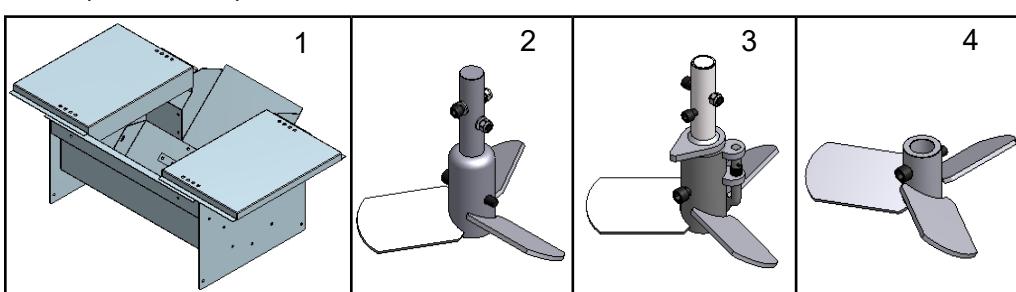

The shown propellers are RHS

Chain elevator with 55° og 90° bend

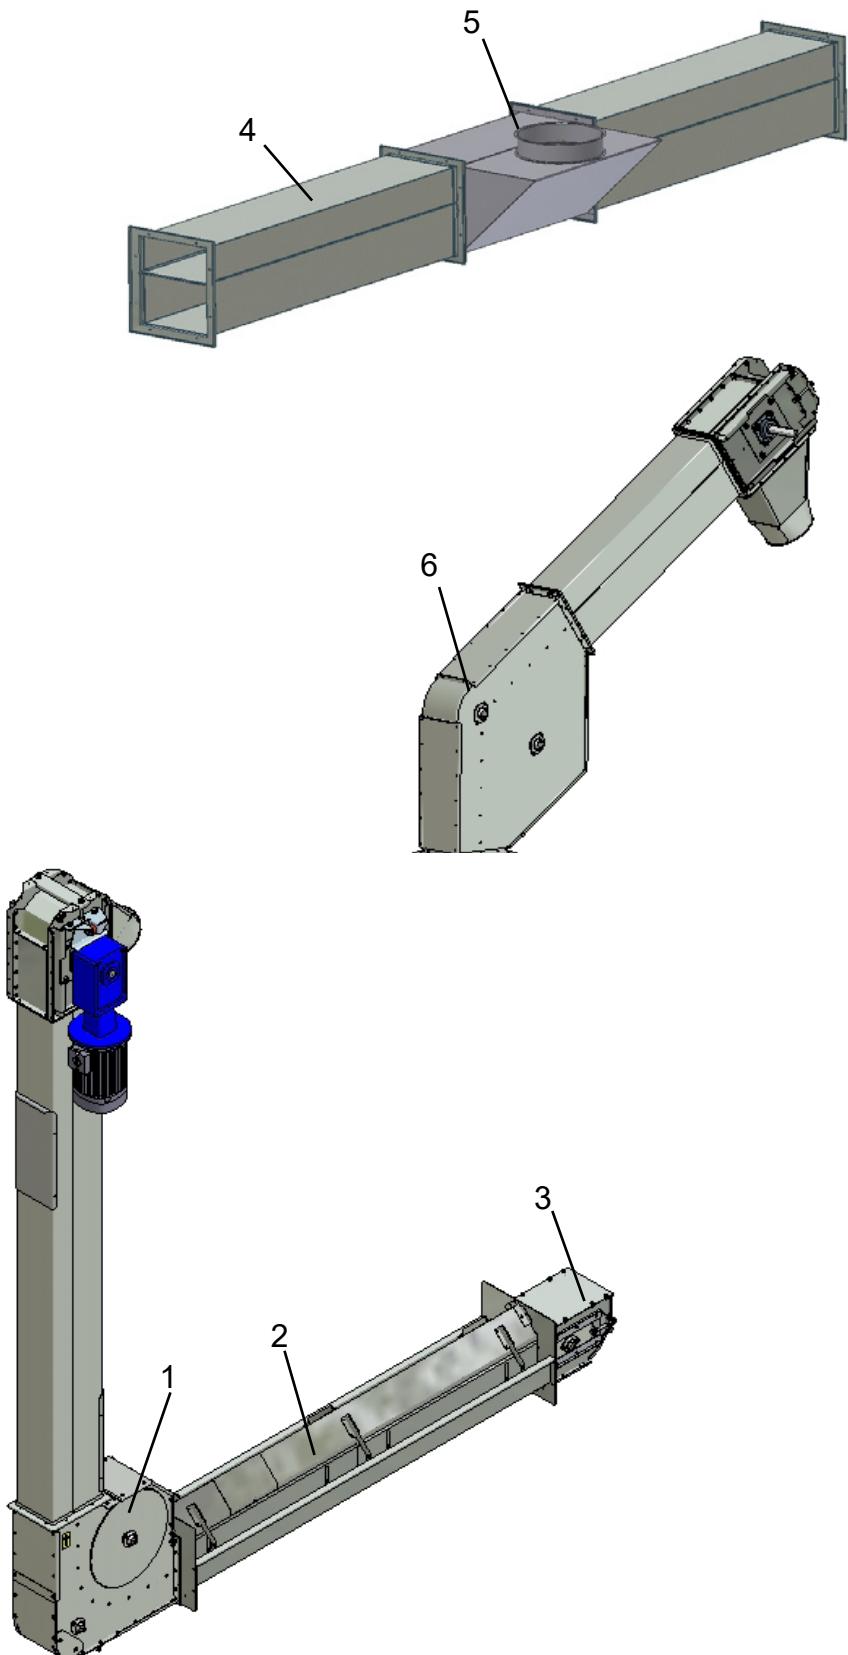

Position	Description
1	90° bend - model A
2	Inlet trough
3	Tension end
4	Extension
5	0.5 m extension with side inlet
6	Bend 55°


Gear motor assembly

Fit the motor and gear on the drive shaft (see below drawing).

The engine can be fitted in parallel or transversely on the machine.

Important!

The breather on the gear must always be fitted in the top position.

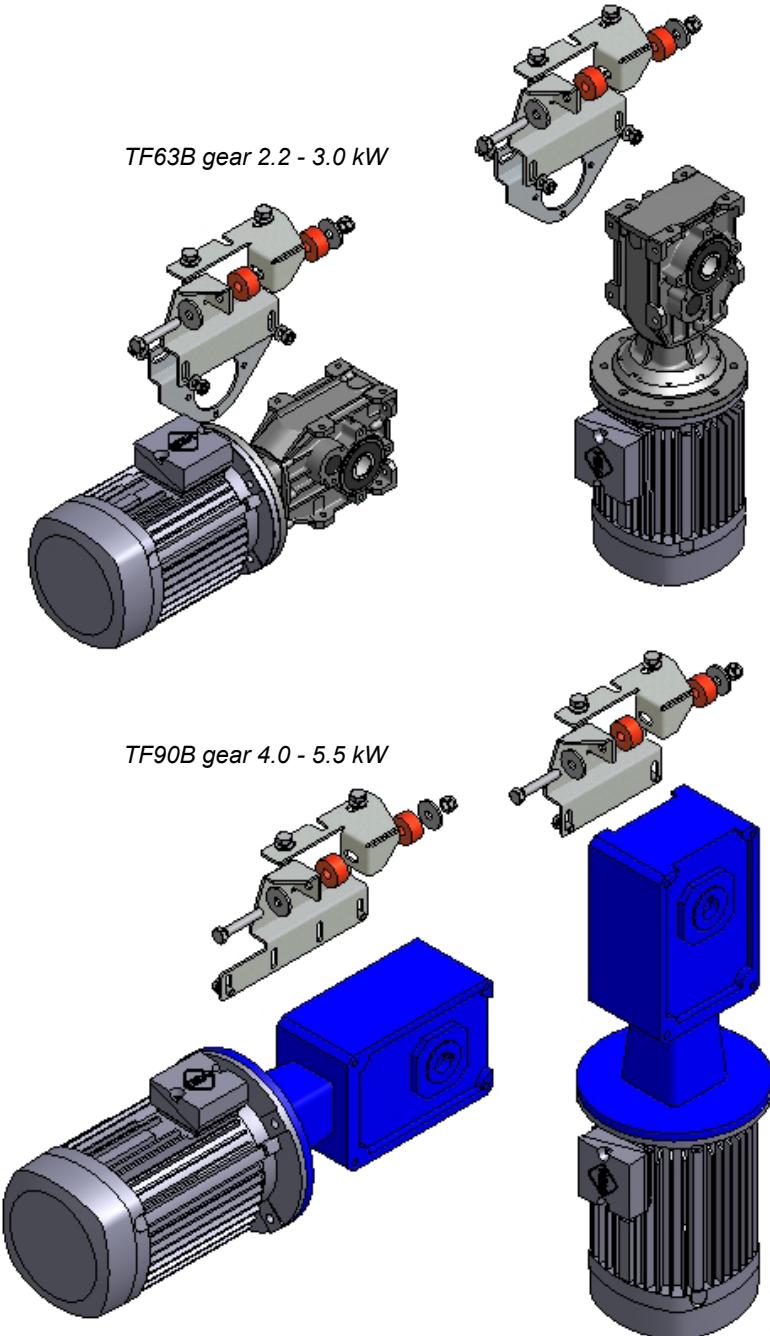


For maintenance of motor and gear: please see the attached supplier documentation.

Fitting the motor and pulley drive

- Start by screwing on the motor stand and then fit the internal pulley guard.
- Fit the small pulley on the motor shaft and tighten with a screw.
- Fit the motor loosely on the stand with 4 bolts without tightening it, screw the clip bolt and tension bolt on the motor stand, and then fit the large pulley on the drive station shaft and tighten it with a screw (remember the Woodruf wedge).
- Offset the motor in the slotted holes of the support, until the pulley sheaves are parallel. Tighten the motor bolts.
- Move the motor stand towards the conveyor by loosening the tension bolt, and fit the pulleys. Tighten the pulleys with the tension bolt and the clip bolt.
- Finally fit the external pulley guard.

The belt tensioning is correct when the belt deflection is 10-15 mm (see drawing).

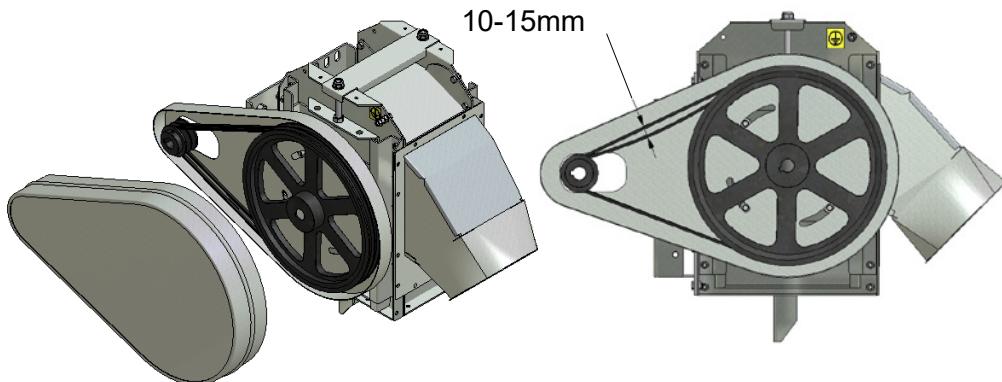

Important!

The belt needs retightening after the first 24 hours, and then according to the maintenance schedule.

NOTE!


Do no use tools to force the pulleys onto the sheaves.

Elevator extensions

Fit the elevator extensions with inspection doors to the elevator boot /pivot inlet in a way that provides sufficient space for later assembly of the chain, as this has to be done through the extension/inlet trough opening/access door.

Fit the extensions as shown on the drawing (if available).


The elevator must be constantly secured during the fitting – see section “Height attachment”.

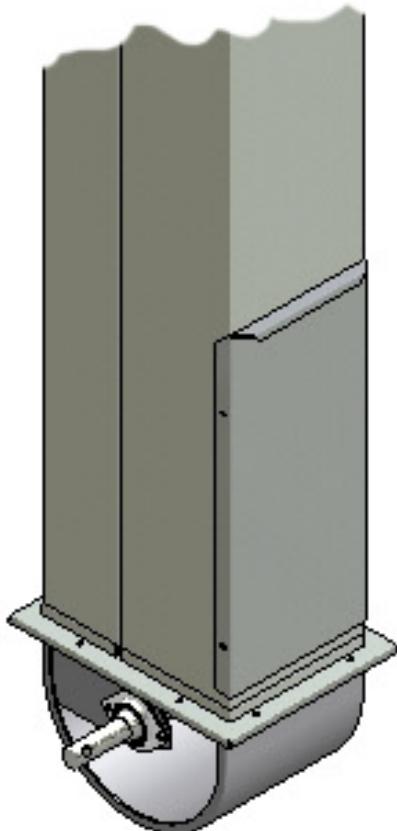

Elevator chain

The conveyor chain is equipped with rubber slats, and the chain must be fitted in the elevator, before the elevator head with extension is hoisted (see drawing).

When the elevator top section with the chain has been lowered into the bottom part, assemble the chain with the enclosed belt lacers.

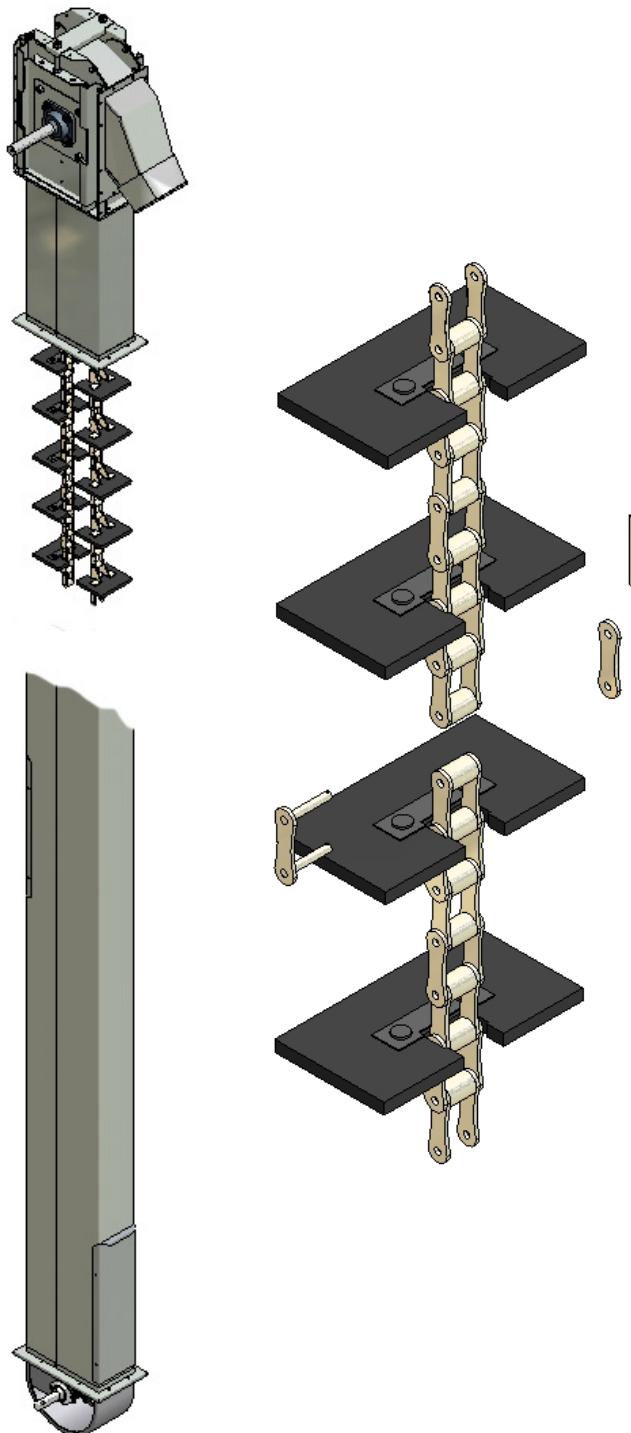


If this is not possible, due to lack of space, insert the chain through the elevator head outlet (see drawing below), insert the complete chain down the channel. Then insert half of the chain into the return channel, so the chain is evenly distributed in both channels.

Block the chain with a rope or wire, and pull one end of the chain around the bottom



sprocket and lift it up to the inspection door. Check the chain length

(loosen the tensioning bolts on the elevator head). If the chain needs shortening, it can be disassembled with a thin chisel. Assemble the chain – use only new clips in the connector links. Tighten the chains with the bolts on the elevator heads with a few mm play at the lower sprocket.

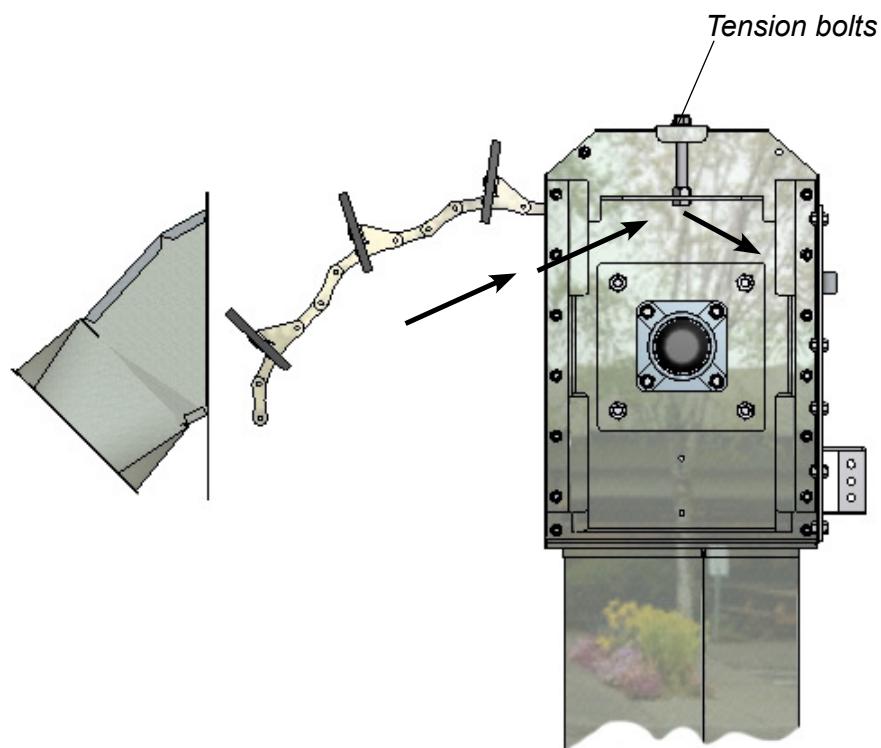

Important!

When fitting and tightening the chain on machines with inclinations, always keep the same distance between the slats (pos. A), and always fit one slat for each four chain links(as on drawings below).

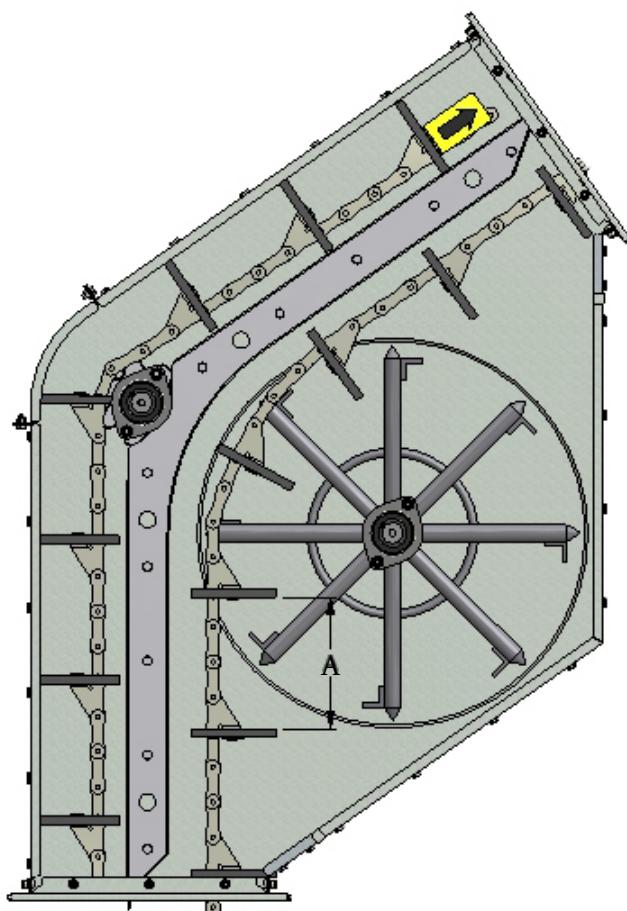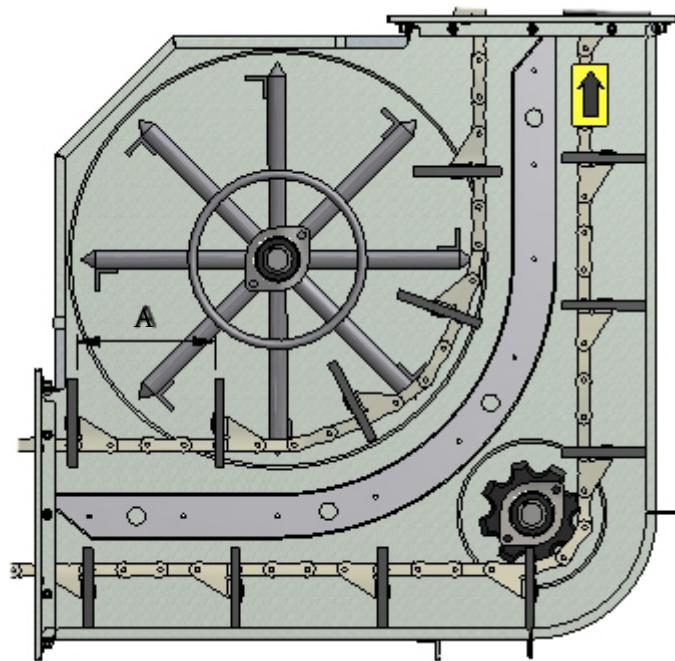


Elevator assembly

Always use correct and approved SWL-lifting equipment for the elevator assembly. Read the section "Upon receipt" before starting the assembly work.

Before lifting the elevator,
the chain must be locked,
e.g. with a rope or wire.

Unlock the chain before
assembly.

Assemble the chain with
the chain connector, when
the elevator top and bottom
part have been fitted (see
drawing).

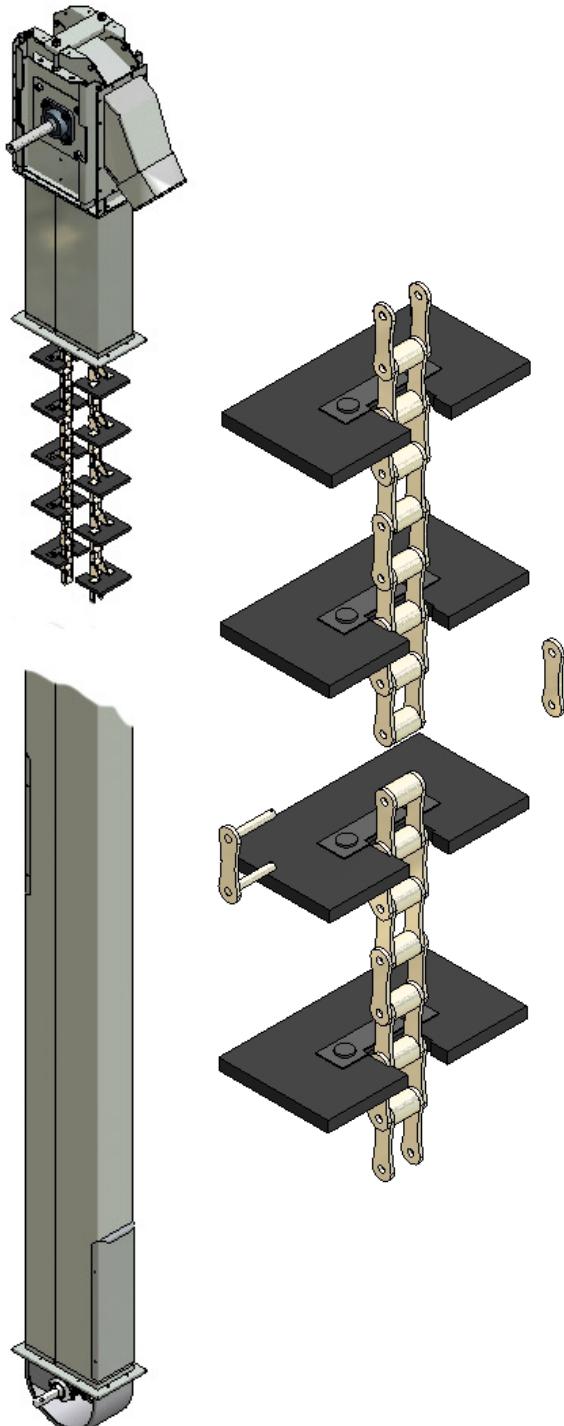

Important!


Remember to fit all inspection doors after assembly.

Potential equalization

The potential equalization must be carried out according to the current regulations.

A label on the elevator head indicates the correct point of the potential equalization. The equalization is important to secure that the machine is metallically connected.


The label indicates the potential equalization point for the chain elevator.

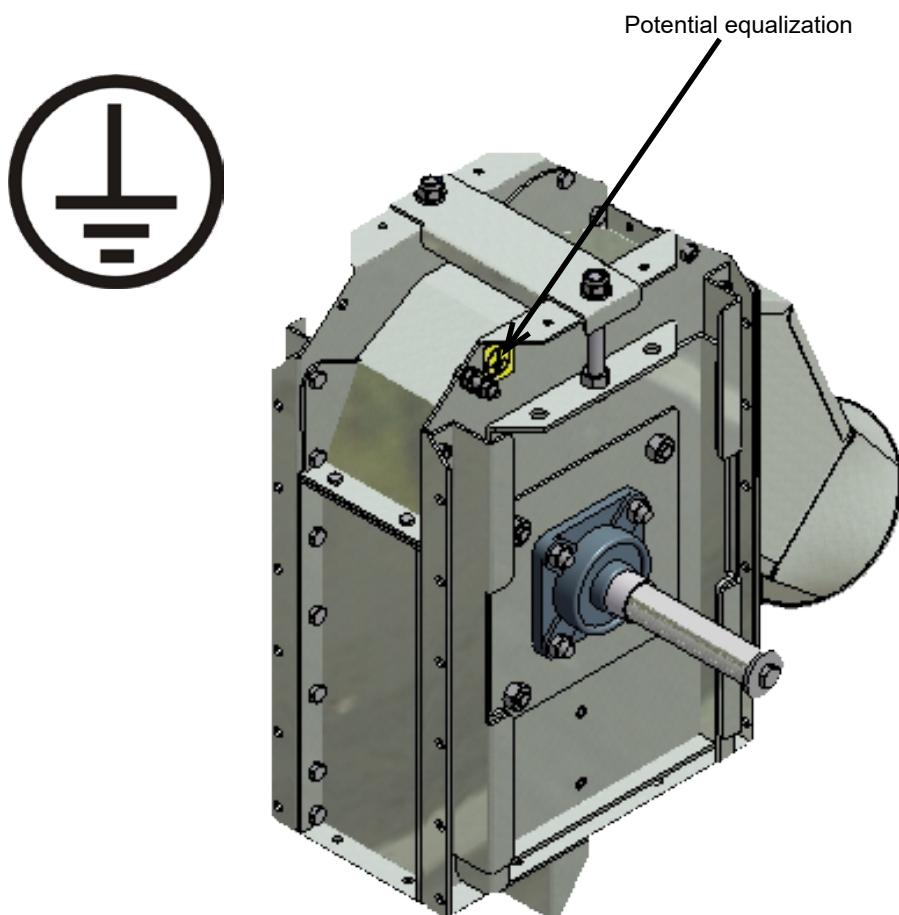

Attachment

In order to obtain the maximum stability, it is important to stabilize the elevator vertical position. There must be a distance of maximum 2.0 m from the elevator head to the top attachment, and 4 m between the following fixation points.

The angle between the wires and the elevator must be max. 45°, and 90° between the wires (see below drawings).

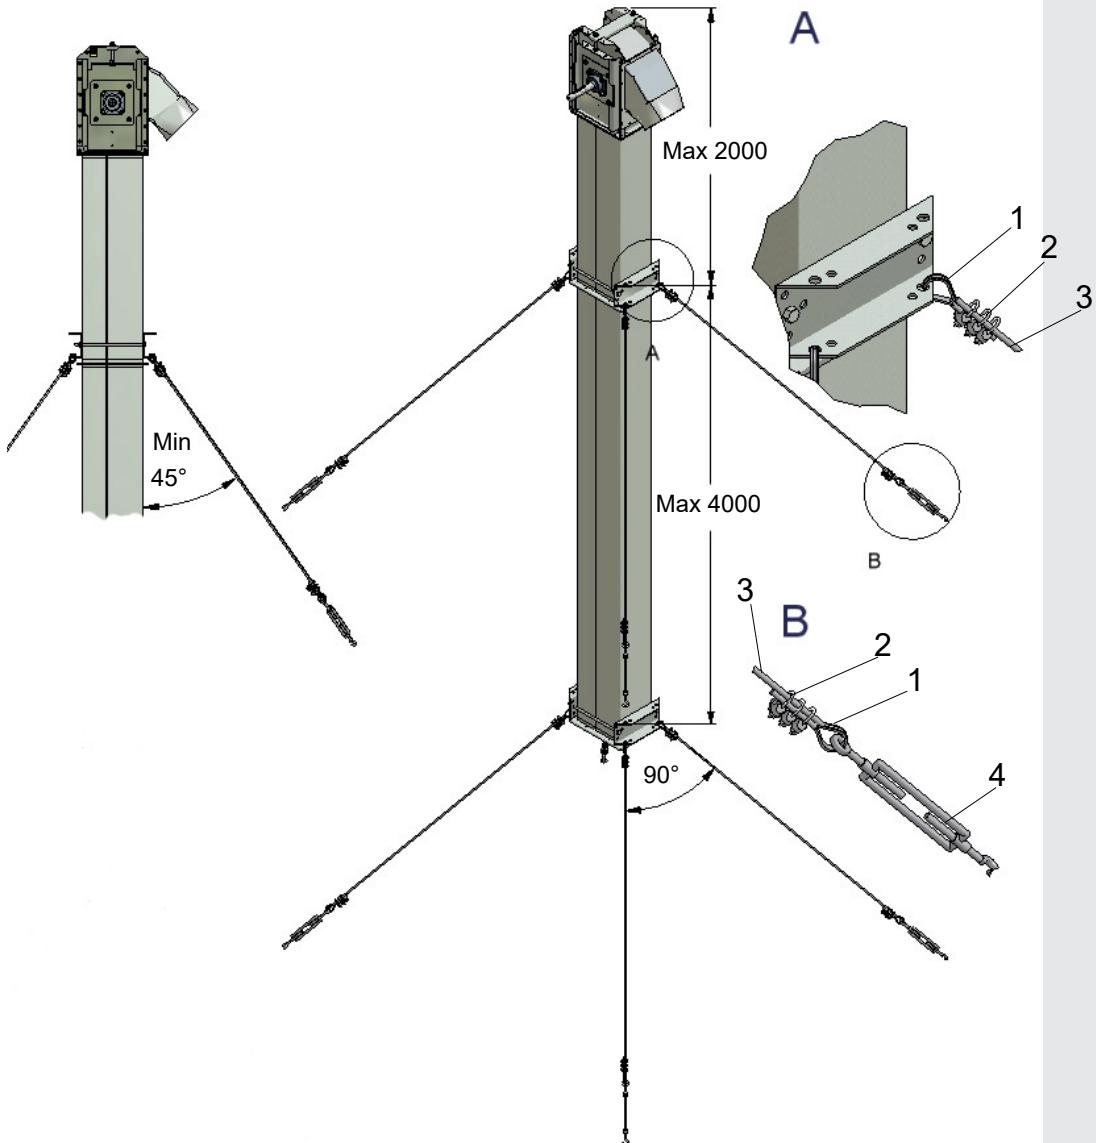


Pos.	Description	CFG 20	Kg.	CFG 40	Kg.
1	Wire thimble for 8mm wire	92092112	0.032	92092112	0.032
2	Wire rope clips for 8mm wire	92092113	0.032	92092113	0.032
3	Wire 8mm (weight per m.)	92092114	0.194	92092114	0.194
4	Wire idler for 8mm wire	92092115	0.400	92092115	0.400

Support of increasing elevator

It's important that the elevator is fixed to ensure stability.

Max. distance between the support points is 5 meters.

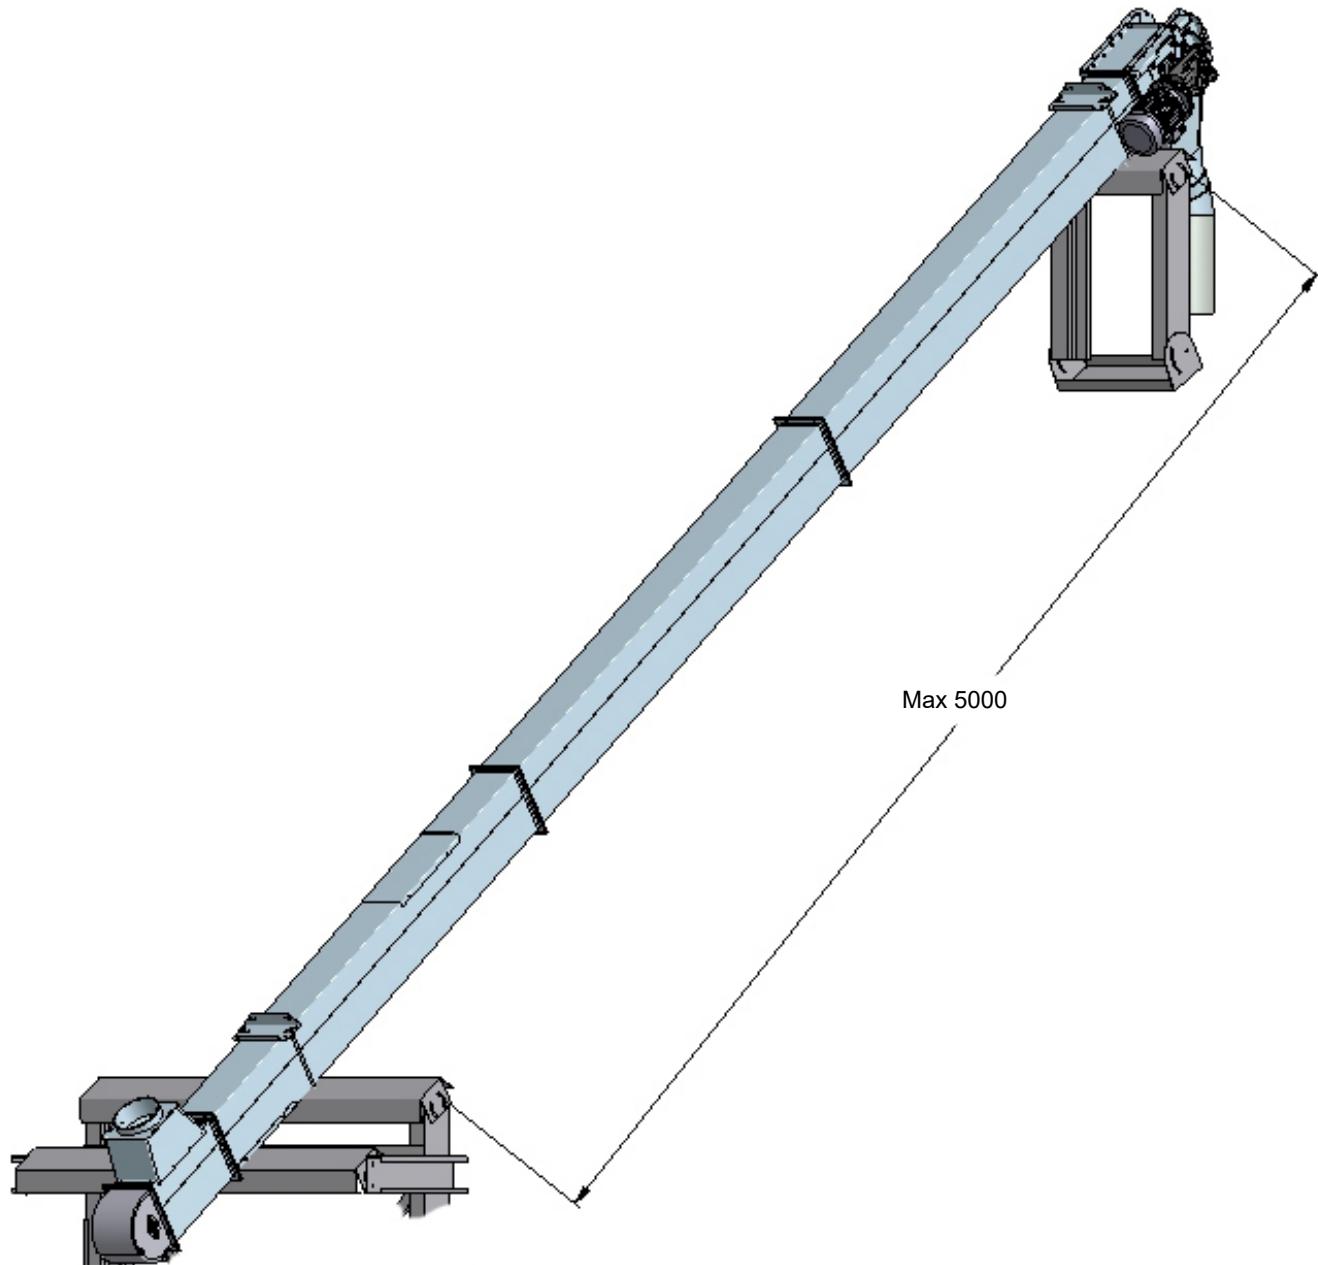

Starting up

Before starting to work with the chain elevator, please check that:

- All inspection doors are fitted
- No work is carried out on/near the machine.
- The motor rotation direction is correct.
- All bolts are correctly fitted and tightened.
- The chain is correctly fitted and adjusted.
- The attachment and stability of the chain elevator is correct.
- Check after start that no joints are leaking.
- If fitted, check for correct tension of the pulley.

Elevator stops – faultfinding

In case of stops, check first whether the elevator is able to start again, when the relay has cooled. If this is possible, the fault is either caused by low adjustment of the relay or lack of motor capacity. Check if the motor is correctly connected by the electrician.

If the elevator is still not able to start without being emptied of material, check whether the return tube (downward passage) on the conveyor is filled with material in the first section (open the inspection door). In this case the fault is due to blockage of the elevator drain (drain tubes too small or insufficient slope) or caused by stops further along in the transport system.

Maintenance

Please see the maintenance summary and the attached supplier documentation for cleaning- and maintenance intervals.

Warning!

- During cleaning and maintenance work, the electric supply for the chain elevator must be disconnected and secured against accidental reconnection.
- After repair and maintenance the inspection doors and shields must be refitted before the work is continued.

Always use original parts only

In case that original parts are not used, the warranty becomes void, and JEMA AGRO A/S can no longer be held liable for the EU Declaration of conformity.

Gear motor

Check the gear as described in the attached supplier documentation.

Important!

Check that the breather is fitted in the top position on the gear.

Motor

Bearing noise from the motor: please see the attached supplier documentation.

Motor inspection: please see the attached supplier documentation.

Retorque the motor as indicated in the maintenance summary. Please see the assembly guidance for instructions.

Pulley kit

Check the belt tension intervals as indicated in the maintenance summary.

Check for cracks on the side of the belts. Replace if necessary.

Note!

Do not mix old and new belts

Elevator chain


Check that the chain tension is correct.

Tighten the belt by using the 12 mm bolts on the top of the elevator head.

See drawing for correct procedure.

IMPORTANT! When tightening the chain, loosen the torque arm.

See inspection intervals in the maintenance summary.

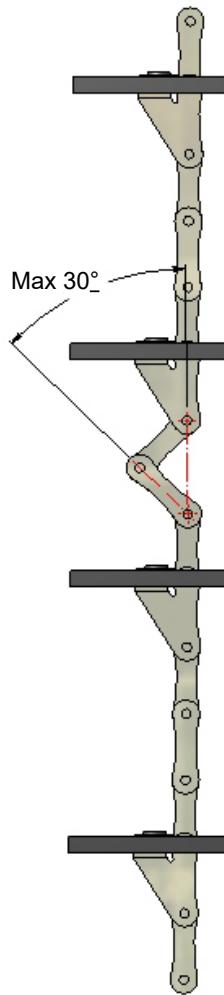

Rubber slats

Defective or worn rubber slats must be replaced. See the maintenance summary.

Bearings.

Check the bearings for wear/play, and lubricate as described in the maintenance summary.

Check for wear/play by lifting up the shaft and check manually.

Make sure that there is no water in the pit, as this will damage the bearings in the elevator boot section.

Lubrication of bearings

Important!

Always keep the lubrication intervals as stated in the maintenance schedule.

It is extremely important to use the correct amount of grease, as too much will damage the sealing of the bearing, which will result in leaks and subsequent overheating of the bearing.

Check the amount of grease per grease gun stroke.

Elevator head

Lubricate the 2 bearings in the elevator head with 3.0 g grease as described in the maintenance summary.

Elevator boot

Check, and if necessary, change the two bearings in the elevator boot after 8000 hrs of operation.

Leaks

Any leaks must be repaired immediately.

Nose and vibrations

Stop the chain elevator immediately and identify the problem.

Disposal

The methods of disposal must comply with the current local regulations

Warning!

The electric supply to the motor must be disconnected during the disassembly.

Disassemble the elevator on the floor, if space allows, following the reverse order of the assembly procedure.

If the chain elevator is disassembled at the premises, start by removing the motor.

For elevators with pulley drive, the pulley must be removed first, then the motor, the large pulley sheave and finally the guard.


The easiest way to remove the chain is to dismantle the connector joint at the bottom of the elevator and then pull out the chain through the bottom inspection door. Screw off the motor stand and the elevator head. Finally remove all extensions.

The chain elevator contains various materials that can be reused. All metal parts should be delivered to a recycle industry.

Options/accessories

A range of various options/accessories is available for the chain elevator, if required.


Inspection door with inlet

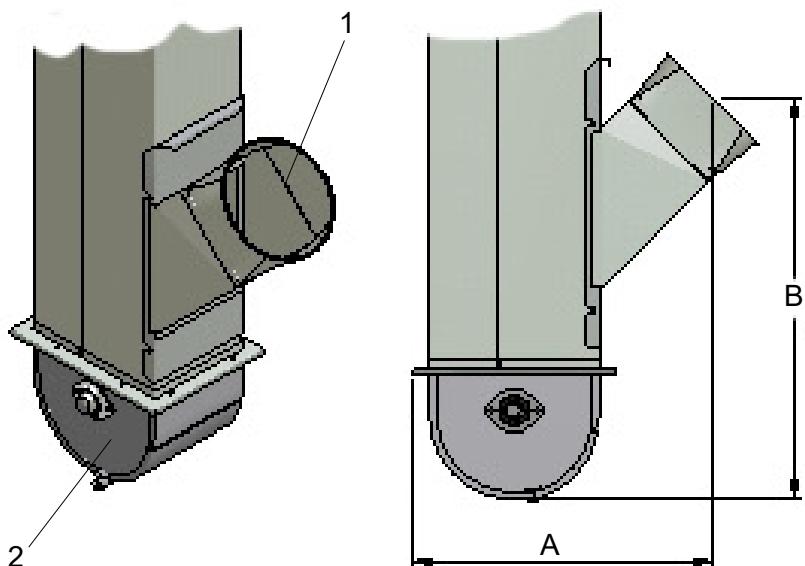

Pos.	CFG 20	CFG 40
A	425	475
B	580	650

Pos.	Description	CFG 20	Kg.	CFG 40	Kg.
1	Inspection door with inlet 45° OK160/d200	92051467	2.000	92052467	3.000
2	Elevator boot, closed	92051231	7.000	92052231	8.000


Inlet piece for flex-elevator boot section

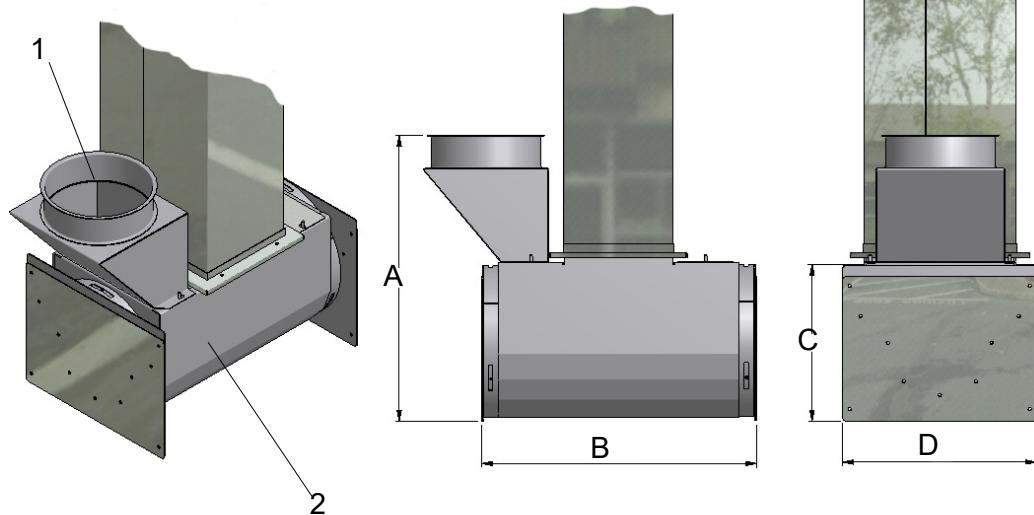

Pos.	CFG 20	CFG 40
A	500	500
B	500	500
C	265	265
D	355	355


Pos.	Description	CFG 20	Kg.	CFG 40	Kg.
1	Inlet piece, flex-elevator boot section OK160/d200	92051303	2.000	92052303	4.000
2	Flex-elevator boot	92051312	22.000	92052312	22.000

Inlet d.200 Flex-boot section, one-way

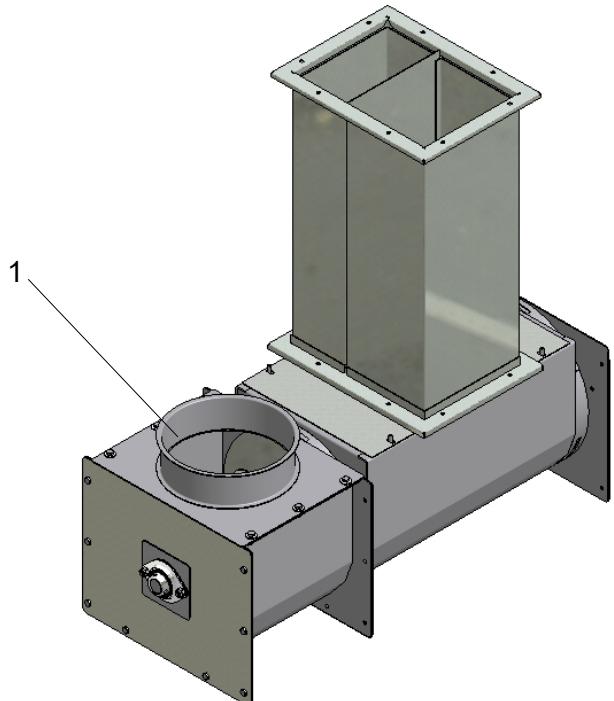


Pos.	Description	RHS	Kg.	LHS	Kg.
1	Inlet diam.200, one-way for flex-boot section CFG 40	92052320	15.000	92052321	15.000

Pos.	CFG 40
A	500
B	280
C	355
D	350
E	Ø200

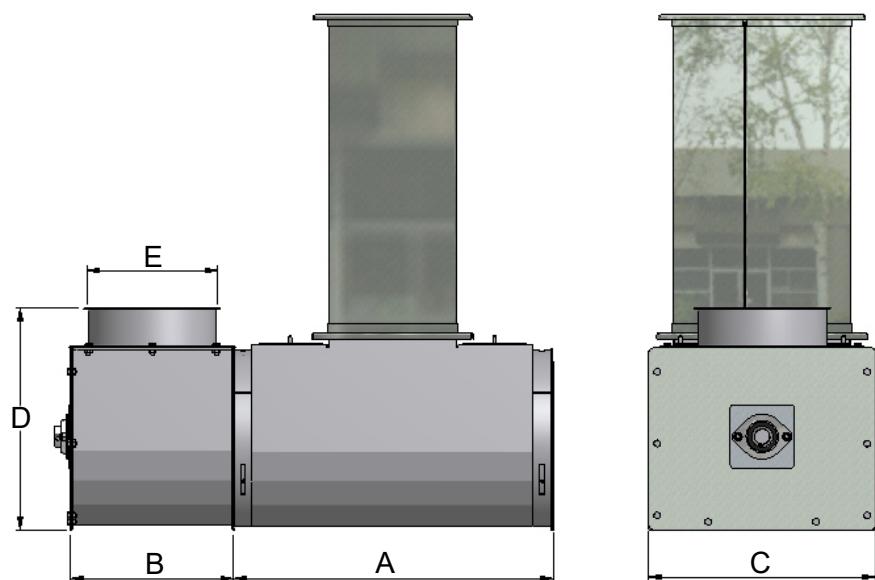


Extensions with pivot inlet

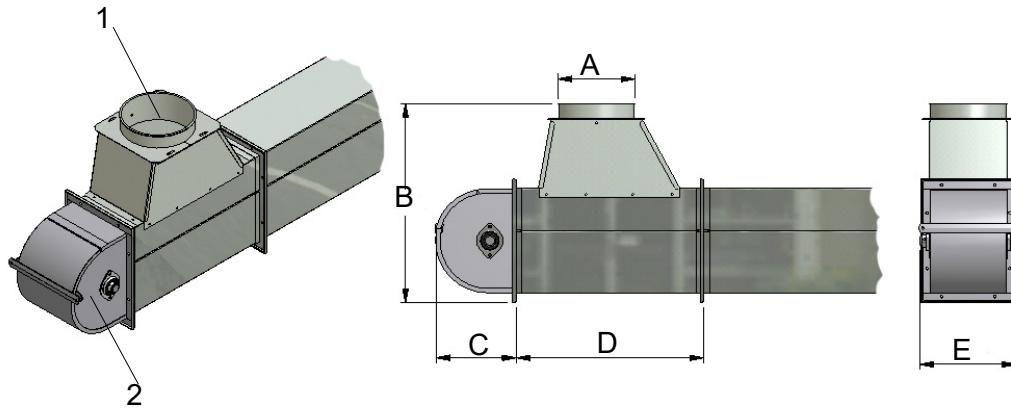


Pos.	CFG 20	CFG 40
A	160	200
B	535	535
C	215	215
D	500	500
E	175	240

Pos.	Description	CFG 20	Kg.	CFG 40	Kg.
1	0.5 m with pivot inlet OK160/d200	92051246	9.000	92052246	12.000
2	Elevator boot section, closed	92051231	7.000	92052231	8.000

Extensions 0.5 m with 45° inlet

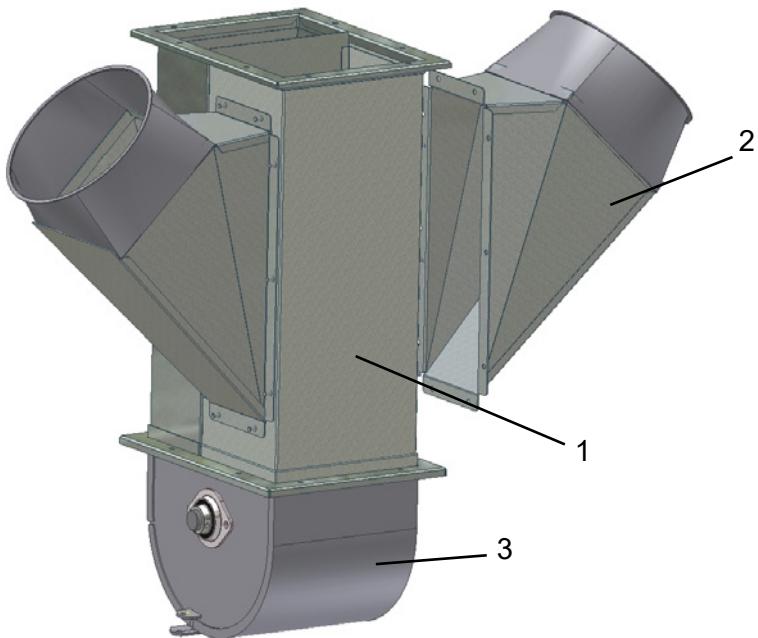


Pos.	Description	CFG 20	Kg.	CFG 40	Kg.
1	Extension 0.5 m with 45° indløb - inlet – RHS or LHS d200	92051249	9.000	92052249	11.000
2	Inlet 45°, d200 for 0.5 m extension	92051250	3.000	92051250	3.000
3	Closed elevator boot section	92051231	7.000	92052231	8.000

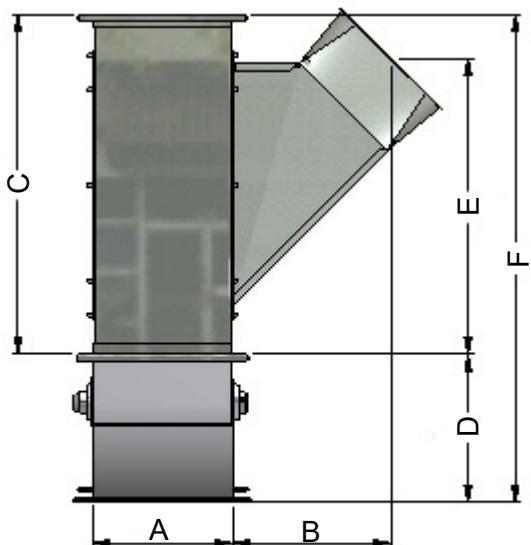

Pos.	CFG 20	CFG 40
A	175	240
B	250	250
C	500	500
D	215	215
E	450	450
F	665	665


Outlet for elevator head

From 90° til 45° inclination:

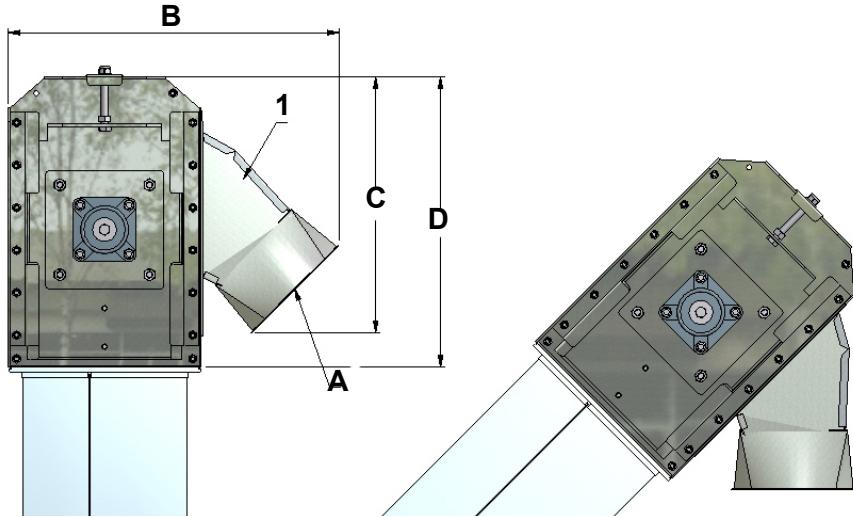


Pos.	Description	CFG 20	Kg.	CFG 40	Kg.
1	Outlet for drive station	92051571	2.500	92052110	3.000
2	Outlet trough for drive-/tension station 90°	92044247	4.500	92045247	5.000

From 10° til 45° inclination

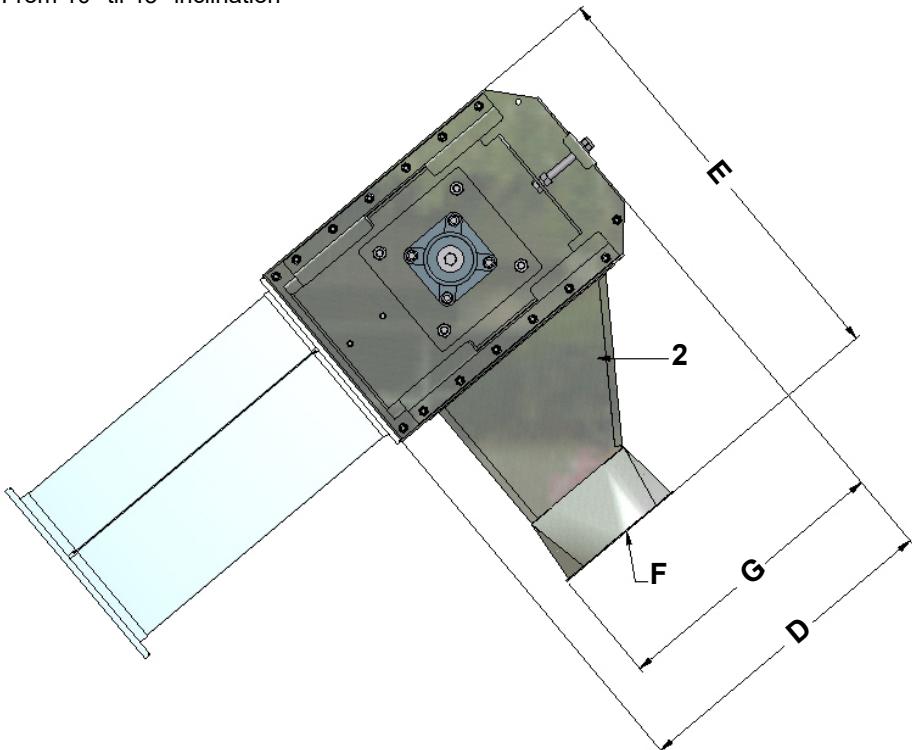

Pos.	CFG 20	CFG 40
A	OK160	Ø200
B	540	565
C	450	440
D	500	500
E	650	650
F	Ø200	Ø200
G	440	440


Hopper for elevator

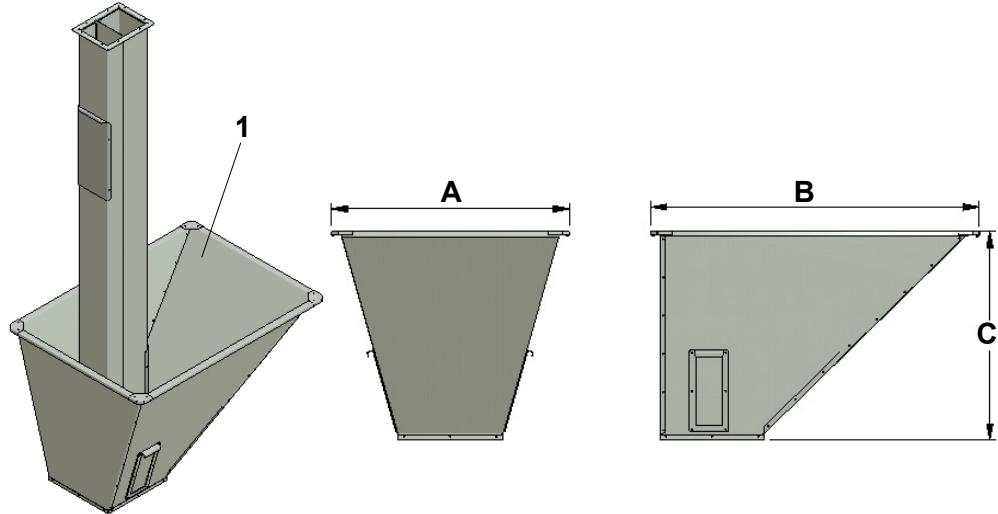


Pos.	CFG 20	CFG 40
A	930	930
B	1290	1290
C	890	890

Pos.	Description	CFG 20	Kg.	CFG 40	Kg.
1	Hopper for elevator	92000082	35.000	92000082	35.000

Parts CFG 20/CFG 40

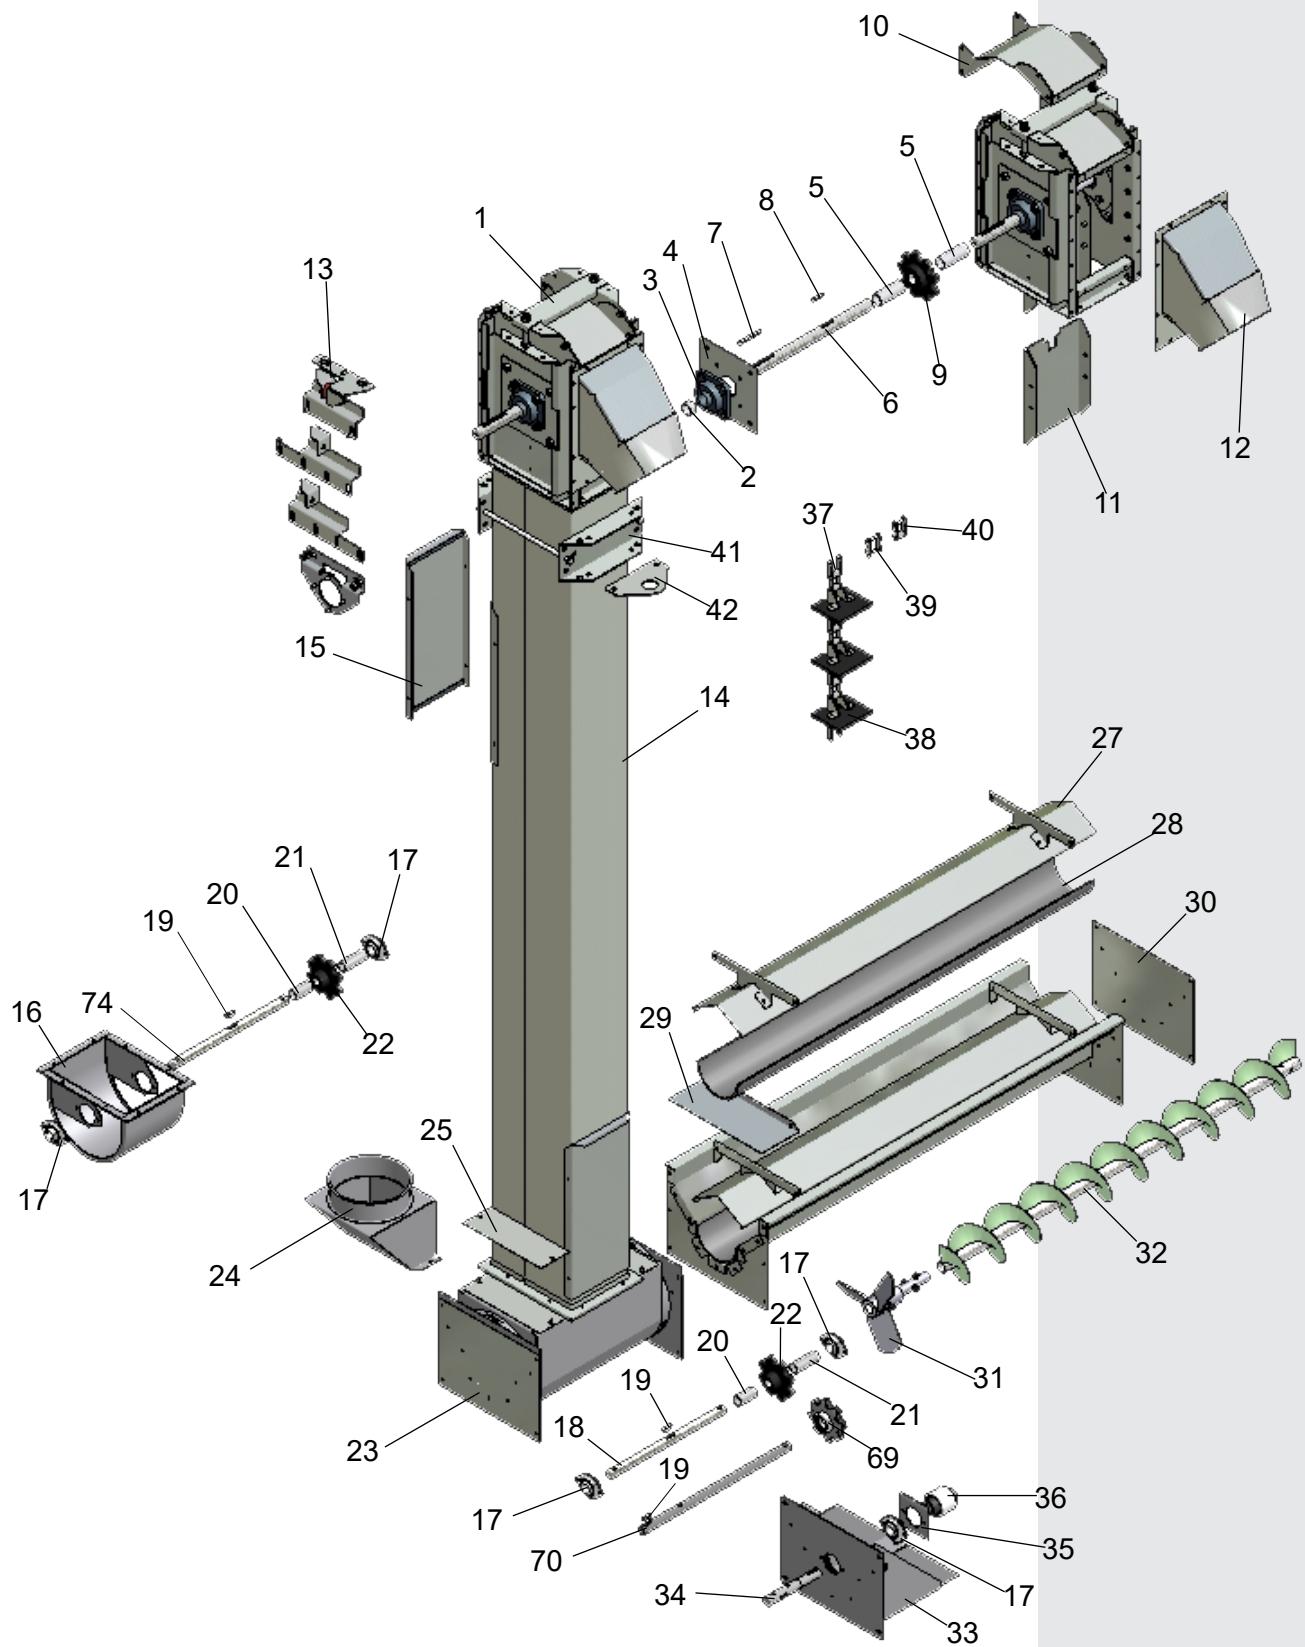

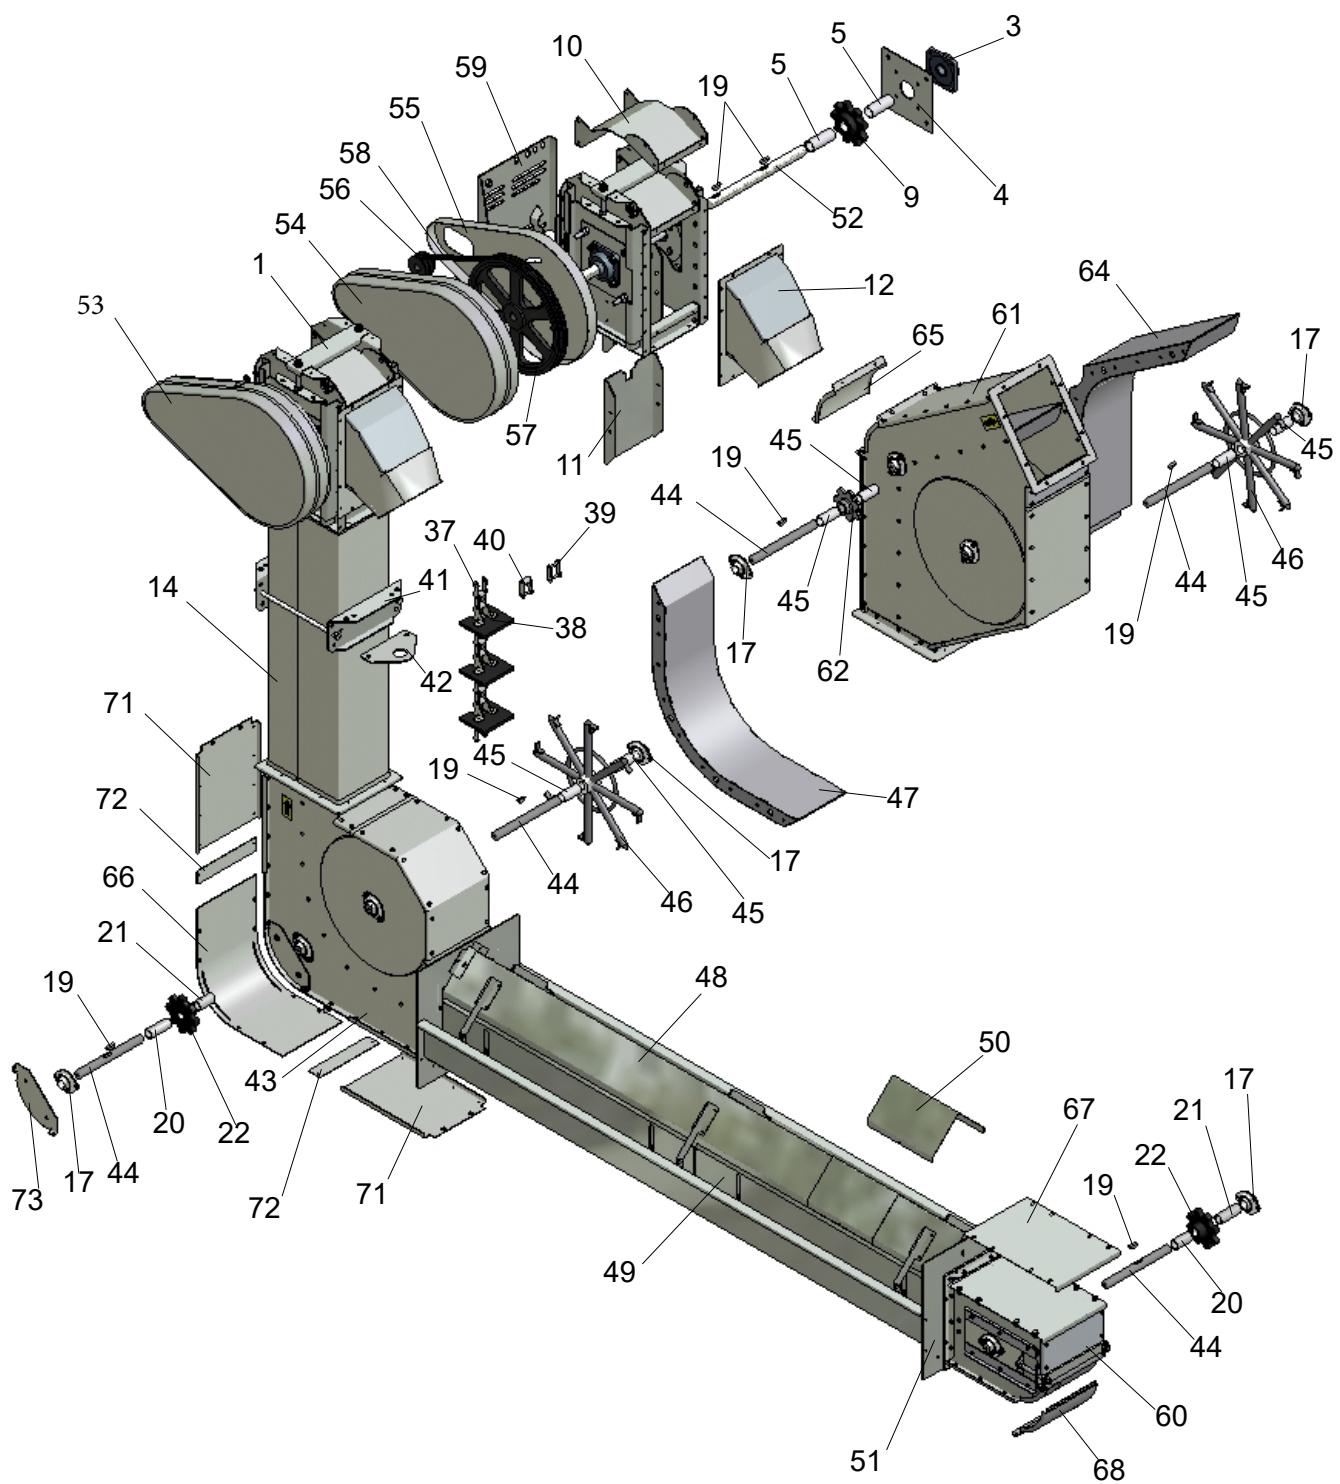

Parts list CFG 20/CFG 40

Pos.	Description	CFG 20	Kg.	CFG 40	Kg.
1	Drive station without chain for pinion gear motor 2.2-5.5 kW, RHS	92051583	36.00	92052483	39.00
	Drive station without chain for pinion gear motor 2.2-5.5 kW, LHS	92051585	36.00	92052485	39.00
	Drive station without chain for pulley drive	92051577	36.00	92052116	39.00
2	Spacer bush d30 for drive station with pinion gear motor	92051581	0.03	92051581	0.03
3	Bearing UCF 206, 30 mm	92085130	1.20	92085130	1.20
4	Bearing plate for elevator head	92051066	0.80	92051066	0.80
5	Spacer bush for elevator head	92020017	0.08	92040017	0.13
6	Shaft d30 for elevator head with gear motor	92051580	2.00	92052120	2.40
7	Feather key 8x7x80 mm	92087066	0.04	92087066	0.04
8	Feather key 8x7x40 mm	92087065	0.07	92087065	0.07
9	Sprocket 9 Z for elevator head d30	92083026	1.80	92083026	1.80
10	Cover plate for elevator head	92051564	1.70	92052105	2.25
11	Adjustable intermediate plate for elevator head	92051570	1.70	92052108	2.20
12	Outlet for drive section d150/d200	92051576	2.40	92052110	2.60
	Outlet for drive section OK160	92051571	2.40		
13	Torque arm for gear motor TF90B/TF63B, fitted parallel/crosswise of the extension	92081319	5.00	92081319	5.00
14	Extension 2.5 m with door, without chain galv.	92051012	35.00	92052012	37.00
	Extension 2.5 m without chain galv.	92051021	35.00	92052021	37.00
	Extension 2.0 m without chain galv.	92051022	28.00	92052022	32.00
	Extension 1.0 m without chain galv	92051024	14.00	92052024	16.00
	Extension 0.5 m without chain galv	92051025	7.00	92052025	8.00
	Extension 0.25 m without chain galv	92051026	3.00	92052026	5.00
	Extension 0.125 m without chain galv	92051027	2.00	92052027	3.00
15	Inspection cover for extension	92020013	1.00	92040013	1.40
16	Elevator boot d135 without chain.	92051142	7.00	92052142	8.00
17	Bearing with flange UCF/PFL 205, 25 mm	92085100	0.30	92085100	0.30
18	Shaft for elevator boot	92040037	1.50	92040037	1.50
19	Feather key 8x7x30mm	92087079	0.02	92087079	0.02
20	Bush for elevator boot, short d26 x 25/d26 x 58	92020038	0.02	92040038	0.06
21	Bush for elevator boot, long d26 x 48/d26 x 78	92020039	0.05	92040039	0.08
22	Sprocket wheel, 8 teeth dia. 25	92020036	1.10	92020036	1.10
23	Flex-elevator boot without chain galv.	92051312	20.00	92052312	20.70
24	Inlet piece for Flex-elevator boot d160/d200 galv.	92051303	2.00	92052303	4.00
25	Cover plate for Flex-elevator boot	92051314	0.40	92052314	0.30
26	Trough 2.0 with cover d135 without auger galv.	92051290	26.00	92051290	26.00
	Trough 1.25 with cover d135 without auger galv.	92051291	17.00	92051291	17.00
	Trough 1.0 with cover d135 without auger galv.	92051292	14.00	92051292	14.00
	Trough 0.5 with cover d135 without auger galv.	92051293	8.00	92051293	8.00
27	Cover 2.0 m for trough d135 galv.	92051387	6.80	92051387	6.80
	Cover 1.25 m for trough d135 galv.	92051388	4.50	92051388	4.50
	Cover 1.0 m for trough d135 galv.	92051389	3.50	92051389	3.50
	Cover 0.5 m for trough d135 galv.	92051390	1.80	92051390	1.80
28	PVC 2.0 m for trough d135	92091062	3.12	92091062	3.12

Pos.	Description	CFG 20	Kg.	CFG 40	Kg.
28	PVC 1.25 m for trough d135	92091064	1.95	92091064	1.95
	PVC 1.0 m for trough d135	92091065	1.56	92091065	1.56
	PVC 0.5 m for trough d135	92091066	0.78	92091066	0.78
29	Cover plate for auger trough at flex boot, galv.	92020309	0.60	92020309	0.60
30	End plate for auger trough/flex-elevator boot/trough under elevator	92020070	1.11	92020070	1.11
31	Propeller with pin, RHS d135 mm	92020053	2.00	92020053	2.00
	Propeller with pin, LHS d135 mm	92020041	2.00	92020041	2.00
	Propeller with pin and free travel, RHS d135 mm	92020054	3.00	92020054	3.00
	Propeller with pin and free travel, LHS d135 mm	92020042	3.00	92020042	3.00
	Propeller without pin, RHS d135 mm	92020052	1.00	92020052	1.00
	Propeller without pin, LHS d135 mm	92020040	1.00	92020040	1.00
32	Auger 0.5 m RHS, without trough d135-S125	92094036	2.00	92094036	2.00
	Auger 0.5 m RHS, without trough d135-S60	92094124	2.00	92094124	2.00
	Auger 0.5 m RHS without trough d135-S90	92094116	2.00	92094116	2.00
	Auger 0.5 m LHS without trough d135-S125	92094016	2.00	92094016	2.00
	Auger 0.5 m LHS without trough d135-S60	92094129	2.00	92094129	2.00
	Auger 0.5 m LHS without trough d135-S90	92094106	2.00	92084106	2.00
	Auger 1.0 m RHS without trough d135-S125	92094035	3.00	92094035	3.00
	Auger 1.0 m RHS without trough d135-S60	92094123	3.00	92094123	3.00
	Auger 1.0 m RHS without trough d135-S90	92094115	3.00	92094115	3.00
	Auger 1.0 m LHS without trough d135-S125	92094015	3.00	92094015	3.00
	Auger 1.0 m LHS without trough d135-S60	92094128	3.00	92094128	3.00
	Auger 1.0 m LHS without trough d135-S90	92094105	2.00	92094105	2.00
	Auger 1.25 m RHS without trough d135-S125	92094034	4.00	92094034	4.00
	Auger 1.25 m RHS without trough d135-S60	92094122	4.00	92094122	4.00
	Auger 1.25 m RHS without trough d135-S90	92094114	4.00	92094114	4.00
	Auger 1.25 m LHS without trough d135-S125	92094014	4.00	92094014	4.00
	Auger 1.25 m LHS without trough d135-S60	92094127	4.00	92094127	4.00
	Auger 1.25 m LHS without trough d135-S90	92094104	3.00	92094104	3.00
	Auger 2.0 m RHS without trough d135-S125	92094032	7.00	92094032	7.00
	Auger 2.0 m RHS without trough d135-S60	92094121	7.00	92094121	7.00
	Auger 2.0 m LHS without trough d135-S125	92094012	7.00	92094012	7.00
	Auger 2.0 m LHS without trough d135-S60	92094126	7.00	92094126	7.00
	Auger 2.0 m LHS without trough d135-S90	92094102	4.00	92094102	4.00
	Auger 2.0 m RHS without trough d135-S90	92094112	7.00	92094112	7.00
33	Console for gear motor, 2.2 kW	92020223	16.50	92020223	16.50
34	Transfer shaft for console and gear motor	92020140	0.75	92020140	0.75
35	Reinforcement plate	92020181	0.20	92020181	0.20
36	Clutch kpl. w28 d25/d25	92087184	0.75	92087184	0.75
	Plastic part sintex clutch w28	92087181	0.80	92087181	0.80
	Steel part sintex clutch w28 d25	92087182	0.35	92087182	0.35
37	Chain runn. m. kpl	92020028	2.00	92040028	4.00
38	Rubber flap with plate and bolt	92020171	0.10	92040171	0.19
39	Connector link for straight chain incl.55	92087102	0.10	92087102	0.10
40	Connector link for offset chain incl.55	92087103	0.10	92087103	0.10
41	Mounting support	92000081	3.00	92000081	3.00
42	Hoist hook bracket for mounting support	92000083	1.00	92000083	1.00

Pos.	Description	CFG 20	Kg.	CFG 40	Kg.
43	Bend 90° with sprocket	92051060	37.00	92052060	42.50
44	Shaft for tension end / bend	92020230	0.70	92040230	1.00
45	Spacer bush d30 x 32,5/d30 x 66	92044060-6	0.03	92040008	0.07
46	Return flow wheel for 45° - 90° bend	92083006	5.00	92083006	5.00
47	Intermediate section, welded, for 90° bend	92051059	7.26	92052059	9.26
48	Inlet trough 2.0 m with return channel and inspection door without chain	92044014	48.00	92045014	52.00
	Inlet trough 1.25 m with return channel without chain	92044011	32.00	92045011	34.00
	Inlet trough 1.0 m with return channel without chain	92044012	24.00	92045012	26.00
	Inlet trough 0.5 m with return channel without chain	92044013	12.00	92045013	13.00
49	Adjustment plate 1.0 m for return flow channel	92044173	2.25	92044173	2.25
	Adjustment plate 1.25 m for return flow channel	92044172	2.80	92044172	2.80
	Adjustment plate 0.5 m for return flow channel	92044174	1.10	92044174	1.10
50	Inspection door for return flow channel	92044170	0.85	92045070	0.85
51	Transition flange inlet trough/extension	92044008	2.00	92045008	2.00
52	Shaft for elevator head d30	92020016	1.70	92040016	2.00
53	Pulley kit 2-grooves d24	92052111	18.00	92052111	18.00
	Pulley kit 2- grooves d28	92052112	20.00	92052112	20.00
	Pulley kit 3- grooves d28	92052113	25.00	92052113	25.00
	Pulley kit 4- grooves d38	92052114	28.00	92052114	28.00
54	External guard for elevator head	92051070	3.20	92051070	3.20
55	Internal guard for elevator head	92051069	2.00	92051069	2.00
56	V-belt sheave A71 2 gr. d24	92082081	0.70	92082081	0.70
	V-belt sheave A71 2 gr. d28	92082113	0.60	92082113	0.60
	V-belt sheave A71 3 gr. d28	92082177	1.00	92082177	1.00
	V-belt sheave A71 4 gr. d38	92082179	1.00	92082179	1.00
57	V-belt sheave A355 2 gr. d30	92082131	8.50	92082131	8.50
	V-belt sheave A355 3 gr. d30	92082193	10.80	92082193	10.80
	V-belt sheave A355 4 gr. d30	92082235	15.00	92082235	15.00
58	Pulley AX 54 – 1372 mm	92084254	0.15	92084254	0.15
	Pulley AX 56 – 1452 mm	92084256	0.15	92084256	0.15
59	Motor stand, large	92051068	3.50	92051068	3.50
60	Tension section kpl	92044095	12.61	92045095	13.77
61	Bend 55° with sprocket	92051030	35.20	92052030	40.00
62	Sprocket 7 Z welded kpl d25	92020034	0.73	92020034	0.73
64	Middle section welded for 55° bend	92051032	8.46	92052032	10.77
65	Cover plate for bend 55°	92051030-3	0.38	92052030-3	0.54
66	Cover plate for bend 90°	92051060-6	2.45	92052060-6	3.38
67	Cover plate for tension section	92044088	1.14	92045088	1.53
68	Inspection door for tension section	92020005	0.53	92040005	0.74
69	Sprocket wheel, 8 teeth with bearing dia. 25	92083037	0.75	92083037	0.75
70	Shaft for flex-elevator boot with bracket	92051315	1.84	92052315	1.96
71	Shroud, large for 90° bend	92051060-8	1.59	92052060-8	2.12
72	Assembling plate for 45-90° bend	92051060-9	0.13	92052060-9	0.20
73	Wearing plate for 45° bend	92052060-7	0.41	92052060-7	0.41
74	Shaft for elevator boot	92020037	1.20	92040037	1.50

When ordering spare parts, please state elevator type (CFG 20/CFG 40) and part no.

128 000 224

You can always find the latest version of the manuals at
www.kongskilde-industries.com

07.05.2018

Kongskilde Industries A/S

Skælskørvej 64

DK - 4180 Sorø

Tel. +45 72 17 60 00

mail@kongskilde-industries.com

www.kongskilde-industries.com



KONGSKILDE

Air solutions / your success